

User Manual

TViX PVR R-3330/ 3300




- ◆ TViX HD R-3300 – A/V IN + optional DTV tuner box.
- ◆ TViX PVR R-3310 – NTSC Analog TV & ATSC Digital TV + A/V IN
- ◆ TViX PVR R-3330 – DVB-T Digital TV only + A/V IN


**** Some specifications could change according with new firmware versions. Please refer to the FAQ on our homepage for further information- <http://www.tvix.co.kr>.**

**** Without internal tuner box, some functions of PVR (EPG or Channels) will not work.**

Safety Notice

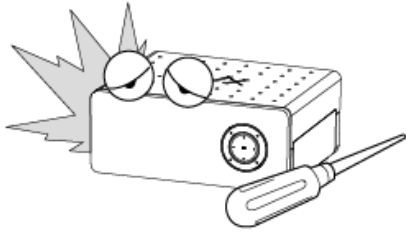

Do not try to disassemble or remodel the TViX unit. Doing so may cause malfunction or fire.

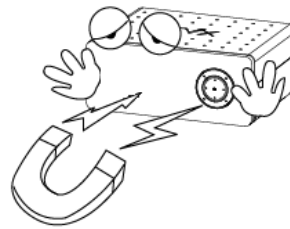


Place all magnetized devices. Such as speakers away from the TViX .It may erase or cause damage to the data stored in the hard disk.




Do not place the TViX in places that are exposed to oil, water, dust, humidity, rain and wind.



Keep your TViX away from heated areas, such as direct sunlight exposure, heaters etc. Place it in a well ventilated location. Ensure that a free airflow is maintained around the appliance.

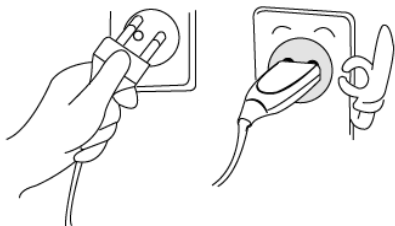

Do not touch the power plug with wet hands or use defective power cables & electric outlets. It may cause electric shocks or fire.

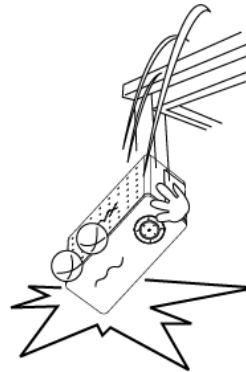

Do not drop the TViX from heights. Doing so may cause critical damage to the hard drive.

**The socket-outlet shall be installed near the equipment and shall be easily accessible.
Unplug the power cable when you will not use the product for a long time.**

Usage Precautions

Thank you for choosing this TViX product.

Please read the following usage precautions before using your TViX.

● **Connect the A/V cable**

Make sure the power is off when you connect the A/V cable between the TViX and the TV.

● **Cleaning the TViX**

When cleaning the TViX unit, pull out the power cord and then wipe it with a soft piece of dry cloth.

● **Antenna connector**

We recommend using a threaded-type antenna connector.

● **Checking Digital signal Reception**

- Press the INFO button on the remote control. The Signal strength meter will appear on the INFO pop up.
- If signal strength meter indicates a weak signal, adjust your antenna to increase the signal strength.
Continue to adjust the antenna until you find the best position with the strongest signal.

● **Record Notice**

- The first partition of the internal hard disk must use the NTFS format. FAT32 format can cause an error message.
- When the signal is weak or unstable, recording cannot work properly.
- When the hard disk is unstable, recording cannot work properly. So you must run Check Disk sometimes.
- You cannot use the DTV time-shifting on FAT32 partitions, so we recommend that you format your SATA HDD to NTFS.

● **Connect USB cable**

When connected to the computer through the USB cable the TViX acts as an external USB storage device (In this state, there is no video/audio output and the VFD will show as USB ON). For normal TViX play mode, disconnect the USB cable connected to the computer and turn on the TViX.

● **Detaching the Hard Disk**

When detaching the HDD, please let it cool off before handling.

● **Supplied cables**

The supplied cables and accessories are recommended for customized best performance of the TViX. Using other cables or accessories may not provide best performance.

● **Unplug the device from PC USB port**

If you want to unplug the device, press the Stop button in 'Unplug or Eject Hardware'.

● **FAT32 Partition**

If you choose FAT32 file format on Windows 2000/XP, the drives maximum size will be limited to 32GB.

If you want to have a FAT32 single drive letter of 32GB or more, you have to format on Windows 98SE/ME.

We don't recommend the FAT32 partition to record the DTV channel.

● **Wireless Network**

To use a wireless network connection, please refer to the TViX homepage (www.TViX.co.kr/Eng) for a list of compatible wireless devices.

● **Certification sticker**

The certification sticker mark is on the bottom of the device.

- DViCO has no warranty or responsibility for broken hard disk. We recommend periodic backups to prevent data loss.


** Some functions will require you first to update to the latest firmware.

Table of Contents

Safety Notice	2
Usage Precautions	3
1 Introduction.....	5
1.1 HDTV PVR Function.....	5
1.2 Multimedia Player Function	6
1.3 Audio Player Function	7
1.4 External Storage Function	7
1.5 Specifications.....	8
2 Name of Each Part.....	9
2.1 Unit Control button.....	9
2.2 Cable Connection	9
2.3 Package Contents	10
2.4 HDD Installation/Exchange.....	11
3 Installation and Connection.....	13
3.1 Connecting the Video	13
3.2 Connecting the Audio	15
3.3 Connecting the External Input	15
3.4 Connecting the USB HOST	16
3.5 Connecting the Antenna	16
3.6 Using the remote control	18
4 TViX Setup Menu	19
4.1 SYSTEM Setting.....	19
4.2 Audio/Video Setting	21
4.3 HDTV Setting.....	23
4.4 NETWORK Setting	24
4.5 MISC Setting.....	26
5 Initial Usage of TViX.....	27
5.1 Making an HDD Folder	27
5.2 Movie Playback.....	28
5.3 Music Playback.....	29
5.4 Photo Playback.....	30
6 Using TViX PVR	31
6.1 Channel Scanning	31
6.2 Using TViX PVR	32
7 Using the remote control	37
7.1 Descriptions of Each Buttons	37
7.2 Extra Features	43
7.3 LAN Connection.....	46
8 Firmware Upgrade.....	60
9 Using USB Connection with a PC	63
9.1 Making a Partition and Formatting the HDDs.....	63
9.2 Unplug or Eject Hardware	66
10 Troubleshooting	67
11 Appendix - Technical Terms	68
12 GNU General Public License	Error! Bookmark not defined.

1 Introduction

1.1 HDTV PVR Function

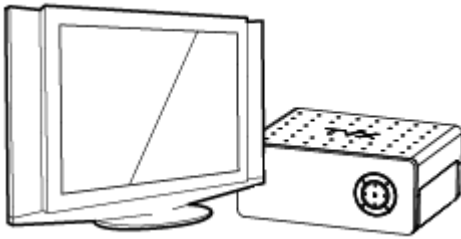

The TViX PVR can play HDTV without a digital TV set-top box with excellent and super-clear display on HDTV screens. The TViX PVR supports standard DTV features, such as EPG and Time-shifting.

Without internal tuner box, some functions of PVR (EPG or Channels) will not work.



Time shifting is the recording of programming to a storage medium to be viewed or listened to at a time more convenient to the consumer. Being interrupted while watching live TV programs (such as pick up phone calls & answer the door), all you need to do is simply press the OK button to freeze the picture for a period of time and then later press OK again to pick up right where you left off. Note: You cannot use the DTV time-shifting on FAT32 partitions, so we recommend that you format your SATA HDD to NTFS.



The TViX PVR has various recording features, including direct recording, scheduled recording, and repeated manual recording, to enable the user not to miss a single program of digital TV. It's a completely different type of PVR since you can easily upgrade and expand the HDD capacity yourself, similar to PC upgrading. And you can back up the recorded file to/from the PC. Also, it can capture external analog video as well as analog TV signals.




The TViX PVR implements DTV features such as EPG-scheduled recording and PC-connectivity to let the user enjoy all the fruits of digital broadcasting as well as supreme audio and video qualities. You can set up scheduled recording and scheduled watch using the EPG window. Note: The EPG is not supported in analog TV or external input (A/V-in) modes.



When using the DTV mode, you can easily configure the sleep time with the FUNCTION key. If the sleep time is reached when a recording is in progress, the TViX will shut down after finishing the recording. In the file list mode, the FUNCTION key performs the File copy/delete and password functions.

DVICO Inc has no responsibility for recorded programs or files made or distributed for purposes of illegal, commercial, or transactional activities. The party or parties who record or distribute the contents bear all responsibility (Civil or Criminal) direct or indirect.

1.2 Multimedia Player Function

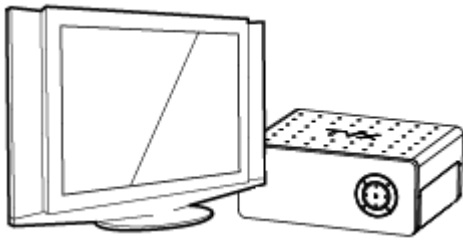

The TViX is a standalone, multimedia hard disk player that plays digital videos, digital music, digital still images and DVD files to a TV display and home entertainment system. You can enjoy digital contents in your living room without having to burn discs or having to play it back on a DVD or CD player anymore.



TViX plays back DVD movies with the full functionality of DVD navigation. You can create your own virtual DVD library by storing your personal collection of DVDs in .ISO or .IFO format and watch them exactly as if they were running from the original DVDs (all original features included: Menu, Chapter, Audio Stream, Subtitle, Fast Forward, Rewind, Slow, Pause, Step Forward, Repeat, Search etc.).



TViX plays back high-definition video (up to 1920x1080i) and still images. Pre-recorded HDTV programs from a digital TV set-top box or personal digital video contents taken by a camcorder can be played back with the TViX on a high-definition display. The TViX features a HDMI connector, which will match the high resolution of HD-level video contents



HDMI provides unparalleled qualities to digital video and audio, while DVI only serves digital video. With HDMI you don't have to deal with several AV cables. It provides single-cable way to connect your display and sound. It can deliver uncompressed digital video up to 1080i as well as digital audio.



TViX has a DTS hardware decoder to mix DTS sound into 2 channels for a more dynamic sound quality.



The TViX can be networked with a PC system using either a wired network or its optional wireless network. You are able to navigate to a PC file through TViX's wired/wireless network and play the file from its original location without having to copy it into the TViX first. Also, TViX' FTP server supports file copying via LAN. (2200 series is supporting optional wireless network only)




With two USB2.0 host ports, you can attach additional external USB hard drives to further extend the storage capacity. You can also play back files from a digital camera, USB flash drive, USB flash card reader or a MP3 player.



Manufactured under license from Dolby Laboratories.


"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

1.3 Audio Player Function

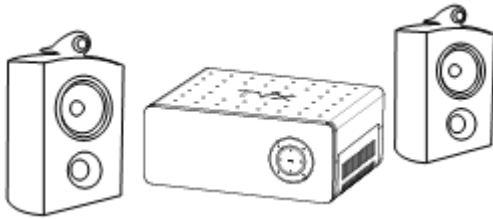

- TViX can play a variety of audio files such as MP3, Ipod, AAC, Ogg Vorbis or WMA (Windows Media Audio) through the TV speaker and any other audio systems. You can listen to your favorite music files nonstop, by organizing a custom winamp playlist. Now you can enjoy music all day without changing CDs.
- TViX supports the playlist by using *.pls or *.m3u.
- You can watch picture slideshows with the option of background music (supports Simultaneous playback of Audio and picture images).

1.4 External Storage Function

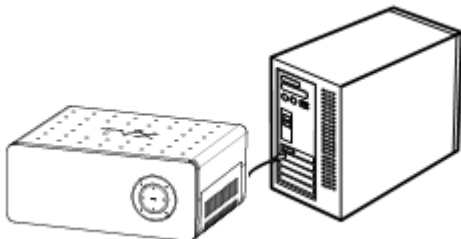

- If you connect to a USB 1.1 port, the TViX HD will work at USB 1.1 speed, so we strongly recommend that you use USB 2.0.
- It can be used as an external device by connecting it to the System, to save video, audio, image files, data, program backups etc.
- USB 2.0 enables TViX HD to become as an external storage device which supports speed up to 480Mbit/s.
- It supports Plug & Play, so Windows will automatically recognize TViX HD the instant it is connected to the system
- If you connect the USB Cable between the system and TViX during playback, then the VFD will display "USB ON." When you disconnect the USB, you do not have to reboot the TViX HD for continuous use.
- If you are a Windows98SE user, you should download a USB storage driver from our website www.tvix.co.kr before you connect your TViX HD with your system. You do not need to install a driver in Windows ME/2000/XP.
- You can download the latest NetShare Software from our website www.tvix.co.kr for configuring an NFS network server on your PC. If you elect to use NFS mode, you can play transport stream or DVD image files without stutter.

1.5 Specifications

MODEL	TViX PVR R-3330
Main Chipset	RT1282 200Mhz processor
VFD Display	7 Alpha-Numeric Character, 5 Digit Numeric Display
Video	Format: .mpg, .mpeg, .avi, .divx, .vob, .tp, .ts, .trp, .dat, .iso, .ifo
	Codec: AVI, MPEG1/2/4 (Xvid), IFO, ISO, .VOB, DAT, TP
	Resolutions up to 1920*1080i
Audio	MP3, WMA, AAC, Ogg, AC3, WAV, rpcm
	DTS Pass Through and Down Mixing
Photo	JPG, JPEG (Progressive JPEG not Support)
Connectivity	USB 2.0 Host 2 Ports, USB 2.0 Target 1 Port
	Wired LAN, optional wireless LAN
	TV Antenna port
Video out	HDMI 1.1, Component, S-Video, Composite
Audio out	Digital : Coaxial, Optical , Analog: Stereo
A/V in	Composite and S-video input
Hard Disk	NTFS, FAT32 (3.5" S-ATA HDD, supports S-ATA 1,2) PVR Recording & Timeshifting : NTFS
Subtitle	smi, smil, sub, sub/idx, lrc, txt, srt, aqt, utf
Cooling FAN	40mm Brushless FAN, Temperature Sensing, Variable Speed
Memory	128M byte
Power	90~250V Free Voltage
Language	English, French, German, Spanish, Italian, Swedish, Czech, Russian, Japanese, Chinese, Korean
Size	183x139x75 mm (W x H x D)


* VIDEO : not support VC-1, MKV, H.264 AVI, MOV or WMV

* AUDIO : not support FLAC, DTS-wav, APE or WMA-Lossless

2 Name of Each Part


2.1 Unit Control button

The TViX was designed to be controlled by its buttons as well as with the remote controller.

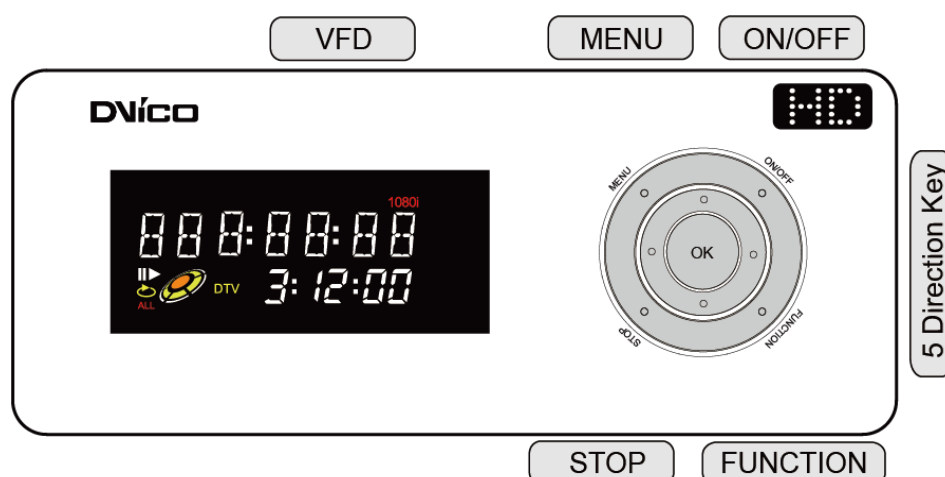

2.2 Cable Connection

You can connect the TViX to an analog TV display or audio amplifier by the A/V cable.

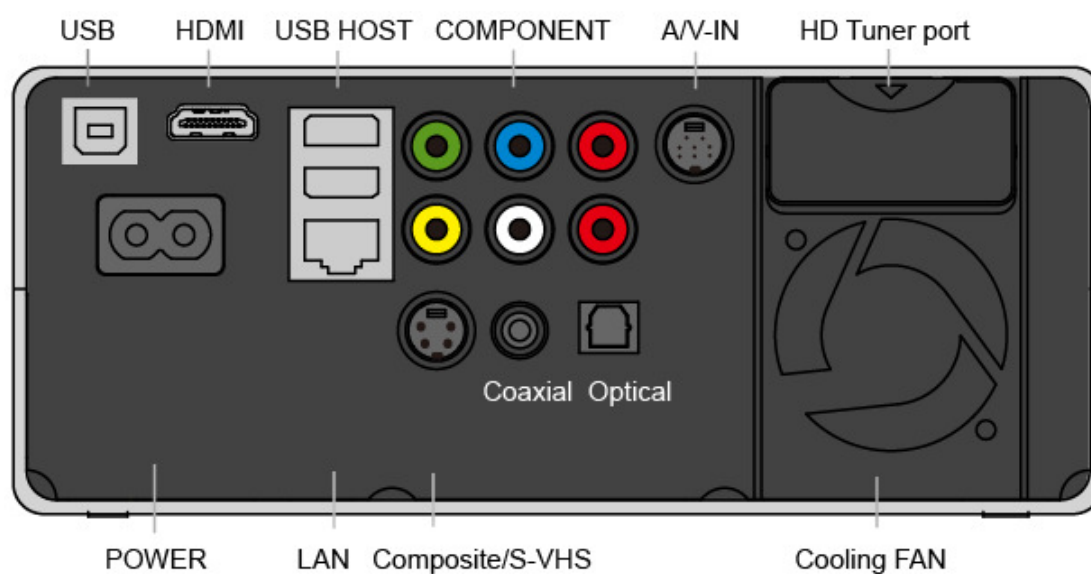


- ◆ TViX HD R-3300 – A/V IN + optional DTV tuner box.
- ◆ TViX PVR R-3310 – NTSC Analog TV & ATSC Digital TV + A/V IN
- ◆ TViX PVR R-3330 – DVB-T Digital TV only + A/V IN

2.3 Package Contents

Thank you for choosing this TViX product.


The TViX PVR package contains the following items. The items described below may differ from the actual contents.

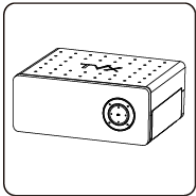


TViX unit




Remote Controller

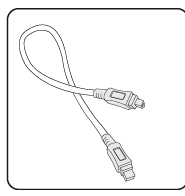

USB PC Cable

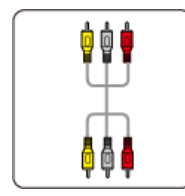

RCA Cable

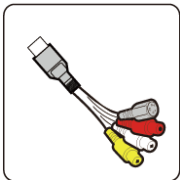


A/V IN Cable



Quick Guide



Manual CD

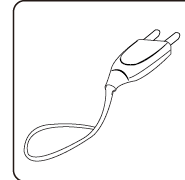

Power Cable

* TViX automatically formats when you install an unformatted new hard disk. Do not shut down the power when formatting the hard disk.


** Connect the included power cable on the back of the TViX. Then plug the other end of the power adapter into an available wall socket. Make sure that your TV is switched to the AV input to which the TViX is connected (on the back of the TV).

<< Before Connecting the Cable >>

- 1** Please refer to TV manual for connecting the A/V cable.
- 2** Make sure the power is off when you connect the A/V cable between the TViX and the TV.
- 3** Connect the red and white RCA cable for stereo audio.


2.4 HDD Installation/Exchange

** Installing or exchanging your HDD is very easy. Just follow up the instructions below. If you already installed an HDD, you may skip this chapter.

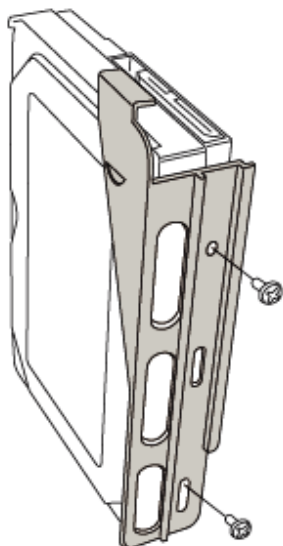


1 Use a Screwdriver and tighten the bolts to attach the guide to the hard disk.


2 Open the lid of the TViX by sliding as shown in below pictures.

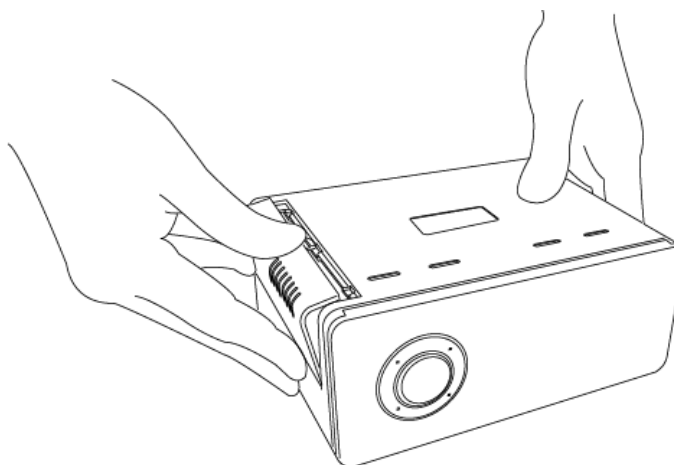


3 Put the 3.5" SATA HDD into the TViX after spreading the cable to avoid damage.

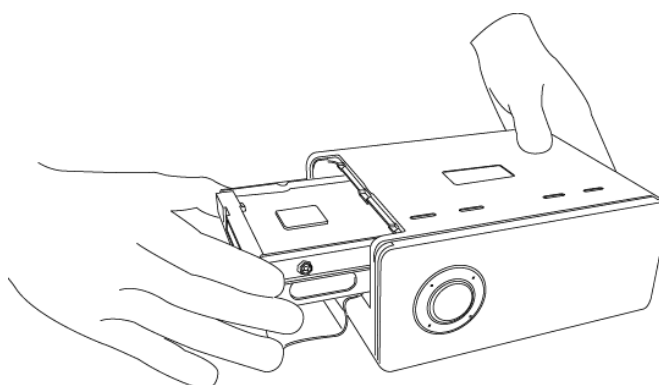


4 Connect the SATA cable as shown in below pictures.

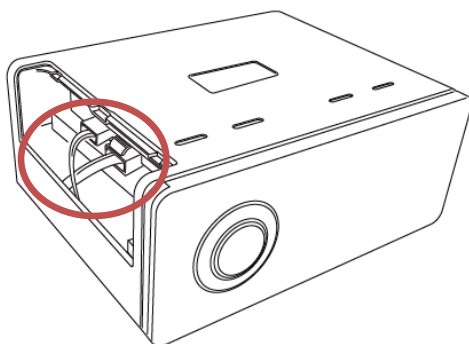

5 Close the lid of TViX.

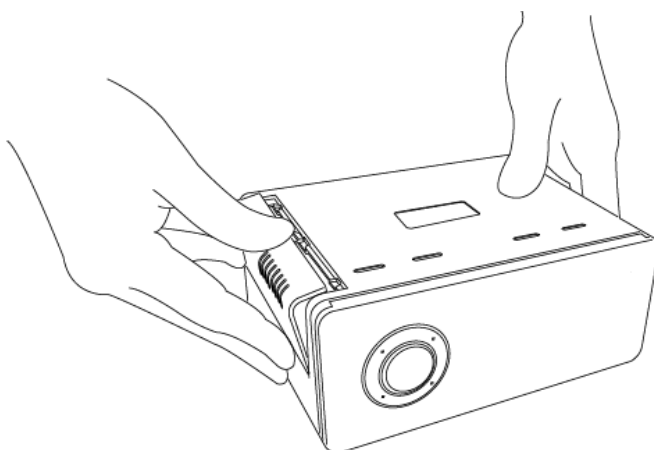

6 To change the hard disk, pull the HDD's guide while pressing the lock button.

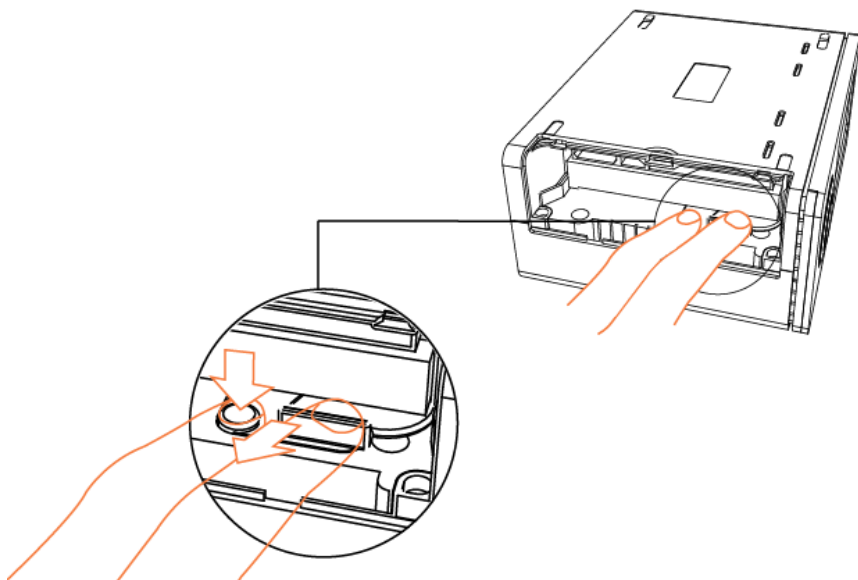


3 Installation and Connection

3.1 Connecting the Video

The TViX supports HDMI, Component, S-Video, and Composite video output for connecting to a TV and each output needs to be selected in the settings menu depending on the cable used.


The highest- to lowest-quality display modes are as follow: HDMI > Component > S-Video > Composite.

Connection to Composite

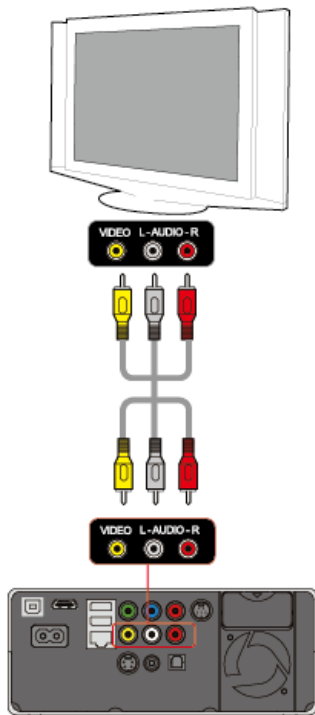

Connect the TViX output to your TV using the included Composite (yellow) video cable. Select an appropriate video input mode on your TV until you get the main page of the TViX. For the Audio, please connect the stereo cable (red/White cable).

Connection to HDMI Output

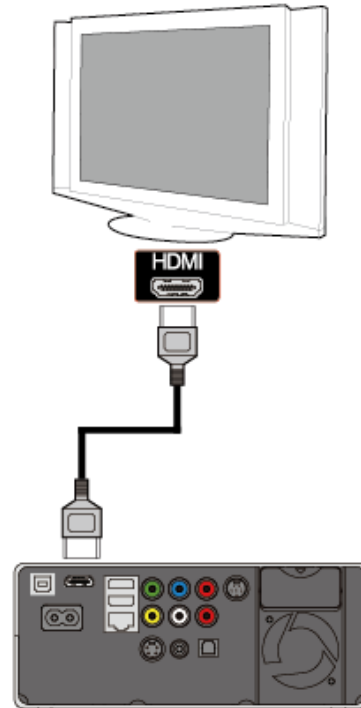


Connect the TViX output to your TV using a HDMI cable.

TViX plays back high definition video (up to 1920x1080i) by using HDMI cables.

HDMI cable can transmit uncompressed audio and video signals together. No additional cables are necessary.

Connection to S-Video Output

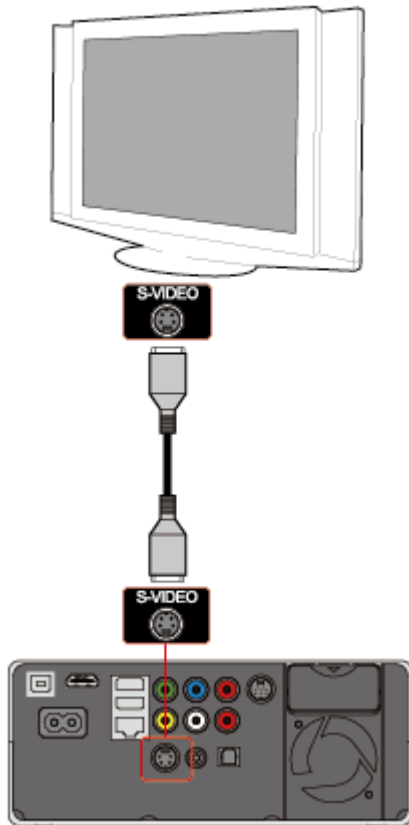


Connect the TViX and your TV using the S-Video cable.

Turn on the TViX and the TV. Select an appropriate video input mode on your TV until you get the main page of the TViX.

Additional cables required for the audio.

(The S-Video cable is not included and has to be purchased separately.)

Connection to Component Output

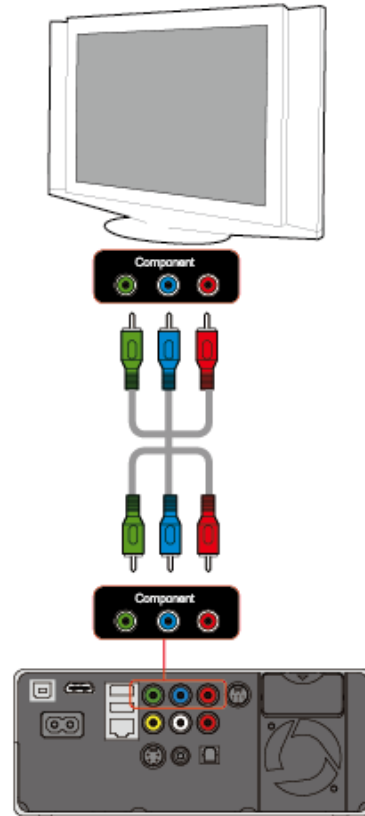

Connect the TViX and your TV using the component cables.

Turn on the TViX and the TV. Select an appropriate video input mode on your TV until you get the main page of the TViX. (in this case, the Component input mode)


Additional cables required for the audio.

NOTE:

After you connect the video cable to your TV, you must press the TV Out button repeatedly on your remote controller until you see the main page of the TViX.


3.2 Connecting the Audio

Connection to 2 CH Normal TV

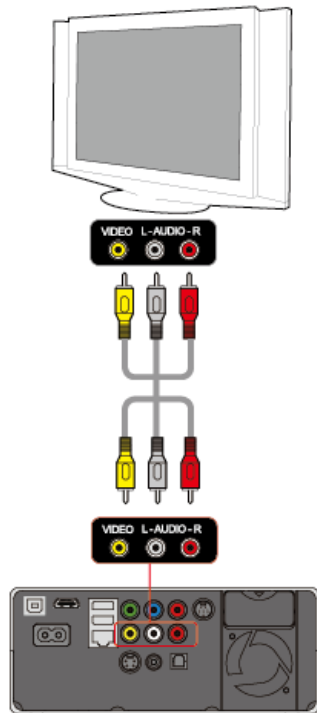

Connect the two audio cables, the left (white) and right (red), to the appropriate terminal of your TV or Hi - Fi system for sound output.

Connection to 5.1CH Amplifier (Digital)

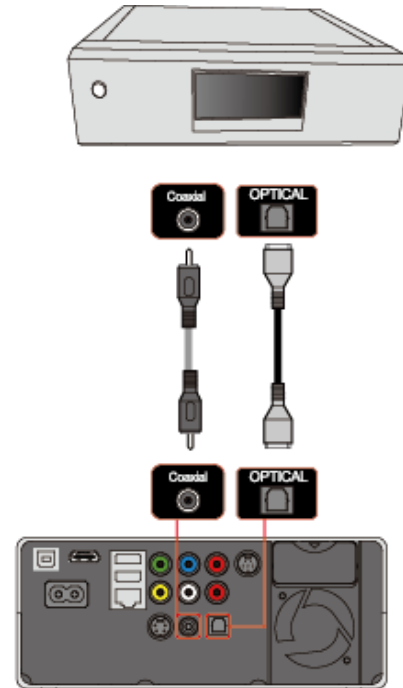


If you have a multi-channel decoder/amplifier with an coaxial/optical input, you can enjoy 5.1 CH high-quality sound through the coaxial or optical cables. The illustration above shows how to connect the optical cable with included optical jack.
(These cables are not included in the package and must be purchased separately.)

NOTE

If there is no sound after connecting the coaxial/Optical Cable, you have to change the audio setup of TViX to Digital on the SETUP menu.

3.3 Connecting the External Input

The TViX provides a composite or S-VHS A/V input.

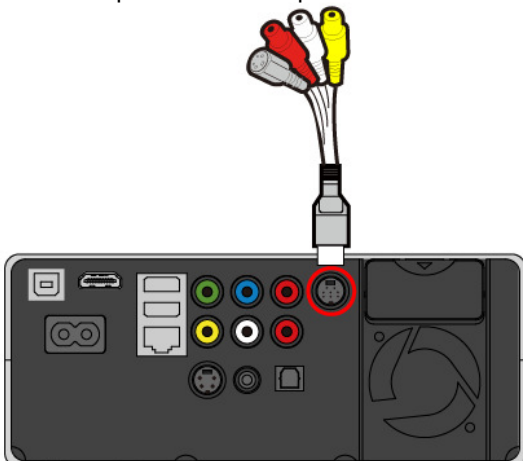


The TViX R3300 series also functions as a personal video recorder or archiving machine, allowing you to capture analog video and store it as a digital format. It can capture or time-shift the external analog video as well as analog TV signal, and then record it in superb high-quality digital format.

Connect the output of the external device to the dongle cables included. Then connect this dongle cable to the TViX A/V IN port. Do not connect this cable by force or you can damage the TViX unit.

You should configure the external device's A/V output to NTSC(480i)/PAL(576i) and analog sound.

3.4 Connecting the USB HOST

The TViX also provides two USB-host ports with USB 2.0 compliant host/ function processor.

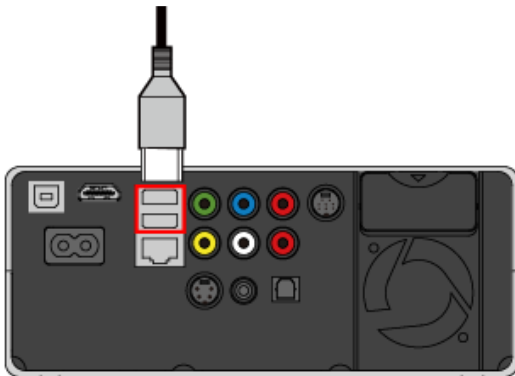


USB-host allows communication between two USB devices. You can connect any external storage device (e.g. memory stick) or an external hard disk and play files stored on these external devices. You can even connect your Digital Camera directly to play digital images and pictures without any other devices.



After connecting the client device, press the left-arrow button on your remote controller and then navigate to the desired storage unit. You can thereby change the location from internal hard disk to external USB device and back.

3.5 Connecting the Antenna


- 1** Before connecting the Antenna or r.f. cable, the power of TViX should be turned off.
- 2** To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.
- 3** We recommend using a threaded-type antenna connector. Move clockwise to tighten.
- 4** If signal strength meter indicates less than the middle of the scale, adjust your antenna to increase the signal strength. Continue to adjust the antenna until you find the best position with the strongest signal.

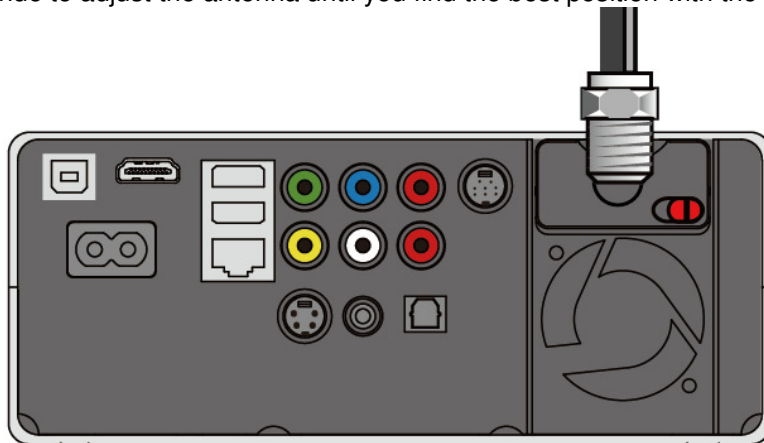

 Without internal tuner box, some functions of PVR (EPG or Channels) will not work.















 
 


















- ◆ TViX HD R-3300 – A/V IN + optional tuner box.
- ◆ TViX PVR R-3310 – NTSC Analog TV & ATSC Digital TV + A/V IN.
- ◆ TViX PVR R-3330 – DVB-T Digital TV + A/V IN.

****** Connect the included power cable on the back of the TViX. Then plug the other end of the power adapter into an available wall socket. Make sure that your TV is switched to the AV input to which the TViX is connected (on the back of the TV).



3.6 Using the remote control

This indicates Remote Buttons.

POWER		Toggle Unit Power on / off
MUTE		Stop Audio Output from the Player
TV/HDTV		Switch between TV or DTV mode
MOVIE		Go to Movie folder
MUSIC		Go to Music folder
PHOTO		Go to Photo folder
Numeric Key		Insert number or text
16:9/4:3		Aspect ratio(16:9/4:3 letter box/4:3 Pan&Scan)
ZOOM		Zoom Video / Image Playback
PREV		Previous Chapter / File / Page Up on List
Next		Next Chapter / File / Page Down on List
JUMP/REW		Jump to USB Host or network drive
SORT/FF		File Sort or FF playback
OK/TIMESHIFTING		Selection/play/pause/time-shifting on/off
ARROW		Cursor Navigation Arrow/Rewind / FF playback
RETURN		Stop Playback/Return to Previous Screen / Folder
VOL + / -		Volume (Increase / Decrease)
CH + / -		Switch TV channel/adjust subtitle sync
INFO		Display Media File Information
SUBTITLE		Subtitle ON / OFF, Change Settings
MENU		Display Main Menu Screen/ DVD Title Screen
GOTO		Time-Stamp based Search/TV channel list
SETUP		Enter Setup Menu, Apply/Confirm Setup Settings
AUDIO		Select multi audio
REPEAT		Repeat Media file(s) Playback
SHUFFLE		Switch between Random – Sequential Playback
TV OUT		Toggle Video Output Modes
TITLE		Select subtitle file
A/V IN		Switch between AV-in(Composite / S-VHS)
FUNCTION		File copy/ folder password/ Sleep Timer
GUIDE		Display DTV EPG Guide
BOOKMARK/SCH		Bookmark / manual recording in TV mode
ADD/DELETE		Add/Remove the recording list/ delete file
REC		Instant recording in TV or AV-in


Some buttons have different functions in PVR mode and file play mode.




4 TViX Setup Menu

4.1 SYSTEM Setting

This section indicates the SYSTEM (Language or Time) settings. Press SETUP button on the remote controller and select SYSTEM.

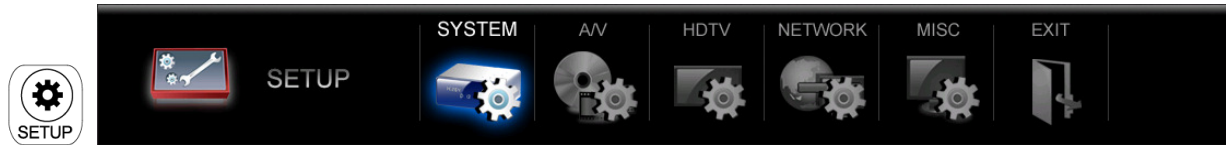

This screen allows you to adjust the SYSTEM settings of your TViX to your personal taste. Select menu to exit this SETUP. Press 'NEXT' button to change next setting.

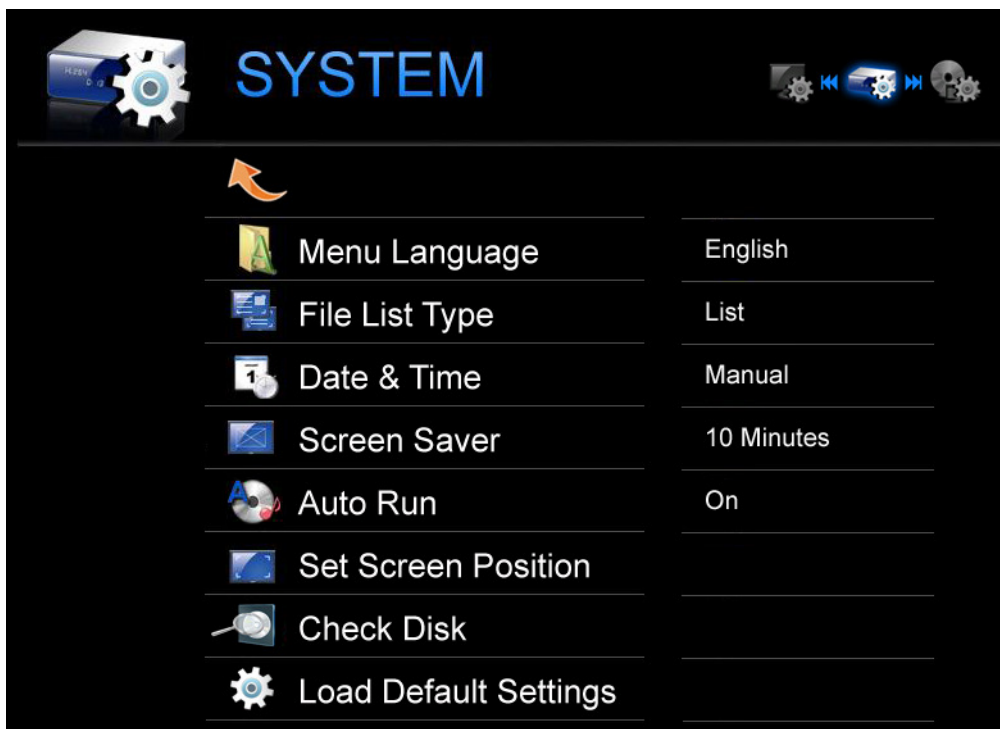


Menu Language : Select your language preference from the options.



File List Type : Switch between File list mode and Preview.



Date & Time : Adjust the clock by using the arrow and numeric keys. With DTV tuner, Auto(Via TV) is available. Also you can change the clock with manual setting. Press Left/Right button on your remote controller to move the option. Press Up/Down button on your remote controller to change a setting.

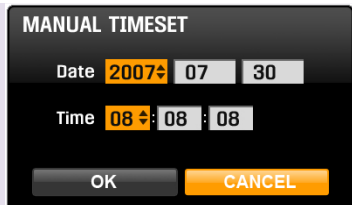

Screen Saver : If there is no activity the screen saver will start after a certain time. You can change the Screen Saver time on this menu.



Auto Run : You can play the files automatically when loading the TViX. If you select "random", it plays randomly.



Set Screen Position : Adjust the UI display position, so you can see exact main UI display on your TV.

Arrow buttons and OK button are available.

1. Adjust Left - Top blue line.
2. Adjust Right - Bottom blue line.



Check Disk : TViX provides the HDD check utility. If you have some problem with recording or file playback, we recommend running this utility in advance.

TViX automatically formats when you connect an unformatted hard disk internally. Do not shut down the power when formatting the hard disk.




Load Default Settings : In order to revert to the Default setting, Press this option. You will need to configure the video and sound settings again.


4.2 Audio/Video Setting


This section indicates the A/V (Video or Audio) settings. Press SETUP button on the remote controller and select the A/V.





This screen allows you to adjust the A/V settings of your TViX to your personal taste. Select  menu to exit this SETUP. Press 'NEXT' button to change next setting.




 **Analog Audio output (Analog PCM)** : Select this when you connect the audio with a stereo RCA cable (the Red and White cable)

 **Digital Audio output (Digital RAW)** : Select this when you connect the audio with an coaxial/optical cable for digital audio connection to the Decoder/Amplifier.

 **HDMI Audio** : Select ON when you want to hear the audio from HDMI.

 **Video Output** : Select this when you connect the video through a composite or HDMI cable. With HDMI setting, you can select the output resolution among NTSC,PAL, 720p 50hz/60hz, 1080i 50hz/60hz. Setting it to 1080i will work on all HD grade TVs.

 **Aspect Ratio** : 4:3 Letter Box / 4:3 Pan & Scan for ordinary TVs; 16:9 for Wide TVs, such as HDTV or Plasma TV.

If the ratio of the TV is 4:3, select the 4:3 letter box or 4:3 Pan & Scan. If the ratio is 16:9, select 16:9.

* The 4:3 Letter box can show the original ratio of the multimedia file in 16:9.




* The 4:3 Pan & Scan will adjust the image of the 16:9 multimedia file to the 4:3 of the TV screen by scaling the image. (This mode is currently not supported)



* 16:9 can adjust any ratio of the multimedia file to the TV screen with the original image.



Video Adjust : Set the Brightness - Contrast - Hue - Saturation.

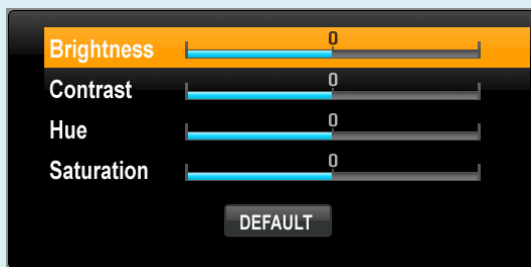

Press OK or STOP button to save and exit current video setting.




Video Auto Switch : is used when the video out is changed according to the NTSC or PAL format.



Apply Video Output : press 'Apply Video output' to save current Video output mode.

4.3 HDTV Setting

This section indicates the HDTV (TV or Time-shifting) settings. Press the SETUP button on the remote controller and select HDTV.

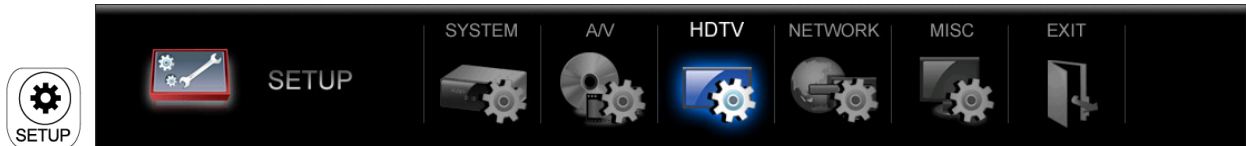

This screen allows you to adjust the HDTV settings of your TViX to your personal taste. Select menu to exit this SETUP. Press 'NEXT' button to change next setting.



TV Input : Select your input. The TViX PVR R-3330 supports only free-to-air DVB-T signals.
 TViX HD R-3300 – A/V IN + optional tuner box.
 TViX PVR R-3310 – NTSC Analog TV & ATSC Digital TV + A/V IN.
 TViX PVR R-3330 – DVB-T Digital TV + A/V IN.



Country/Location : Select your country or location.



Time Zone : to use the EPG guide with correct recording times, you have to configure your time zone by using the arrow keys.



Audio Language : select default audio. To change the audio format, press the AUDIO button on the remote.



 
TimeShift Duration : Set the maximum time-shifting interval.



Analog REC Quality : Set the analog recording quality.(Analog TV or external A/V-in)
 Below data describes analog recording file size and bit rate.
 HQ : 69.2MB/min 720*480, 9364Kbps,
 SP : 42.2MB/min 720*480, 5801Kbps
 EP : 28.3MB/min 352*480, 3985Kbps




Start Channel Scan : Press 'Start Channel Scanning' if you want to scan the channel.




4.4 NETWORK Setting

This section indicates the NETWORK (Network or FTP) settings. Press the SETUP button on the remote controller and select NETWORK.

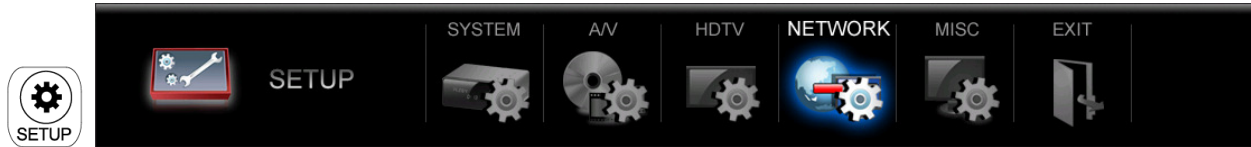

This screen allows you to adjust the NETWORK settings of your TViX to your personal taste. Select menu to exit this SETUP. Press 'NEXT' button to change next setting.

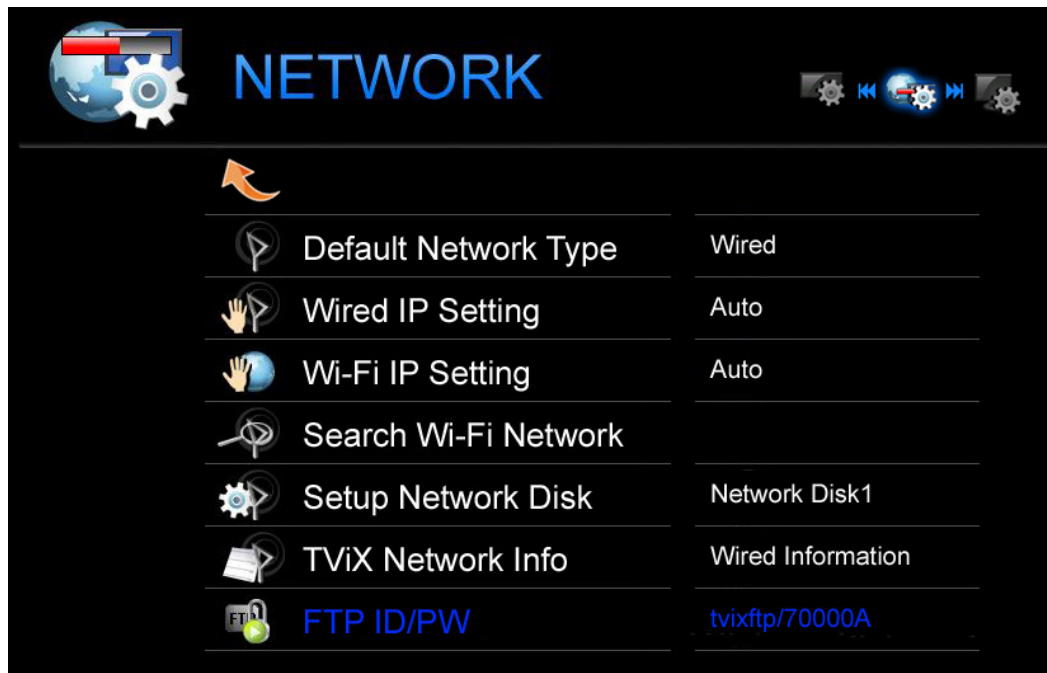

**** For detailed Network instructions, please refer to the enclosed TViX CD or the latest pdf file on the TViX Homepage (www.tvix.co.kr).**

With NFS, TViX can play tp files on a PC flawlessly through LAN.

We recommend the NFS connection rather than SAMBA. You need to install the TViX Netshare program (or other NFS server) on the server PC, but the settings are much easier than in SAMBA mode.

You can download NetShare installer from our website www.tvix.co.kr/Eng to easily configure your NFS network.


Default Network Type : Select Wired network or Wireless network. (2200 series is supporting optional wireless network connection only)

Wired IP Setting: Default setting is DHCP. If you cannot access via LAN with DHCP setting, use the Static IP setting. For a static IP, refer to the **LAN Connection**.


Wi-Fi IP Setting : Default setting is DHCP. If you cannot access via LAN with DHCP setting, use the Static IP setting. For a static IP, refer to the **LAN Connection**.

Search Wi-Fi Network : Connect the USB module into enclosed cradle after connecting the AP Router to a PC. Press "Search Wi-Fi Network" to search for your AP or AP router. After some interval

of searching, you can see the AP LIST popup menu. Select the AP that you want to connect to.

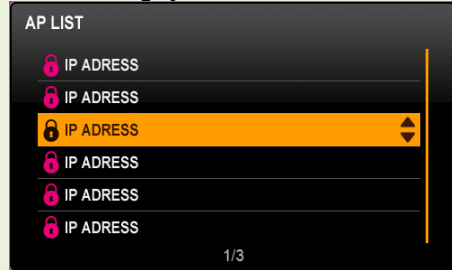


Setup Network Disk : Write the PC's IP address in the Server IP. (ex: 192.168.001.128). Supports up to 4 Network disk server.

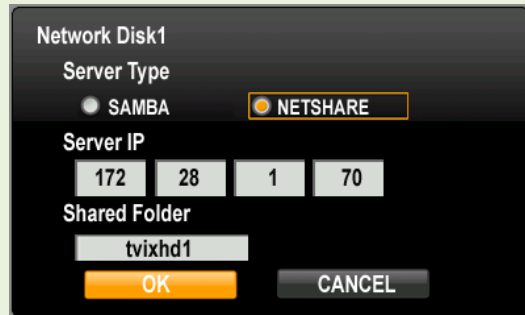

Share Folder name should be written as tvixhd1 / tvixhd2 / tvixhd3 / tvixhd4




TViX Network Info : You can see the information of TViX's Network.

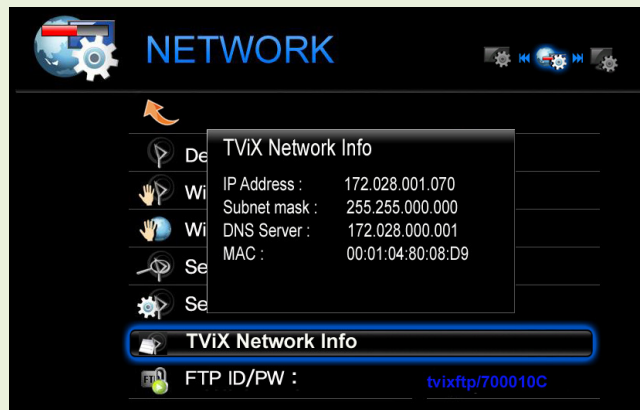


FTP ID/PW : to use FTP function, you must use the ID & password displayed on the Network Menu within SETUP. The FTP ID is tvixftp. You can use capital letters only for the password. You may write the FTP address to the TViX IP Address on the TViX Network Information

4.5 MISC Setting

This section indicates the MISC (Photo effect or Subtitle) settings. Press the SETUP button on the remote controller and select MISC.

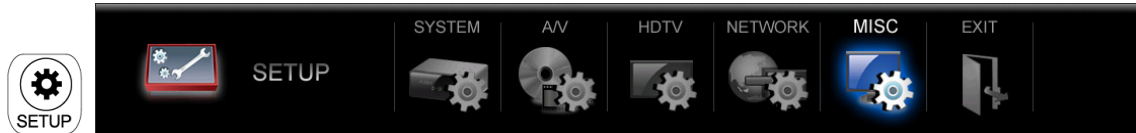

This screen allows you to adjust the MISC settings of your TViX to your personal taste. Select  menu to exit this SETUP. Press 'NEXT' button to change next setting.



Slide Show Effect : is used when playing background music while watching picture slideshows.



Slide Show Delay: Set the slide show time interval.



OSD Display : Select the type of OSD display. We recommend the Normal mode.



Subtitle Color : Change the color of the subtitle and its outline.



Fan Speed : Select your Fan Speed. We recommend the Normal setting.



Set Folder Password : In order to password-protect folders, you will first need to setup Admin Password. Default Admin Password: 0000 (4-zeros). Perform the SETUP-SYSTEM-Load default settings if Admin Password is lost.

CHANGE PASSWORD

Password 0000

New Password

Confirm


OK

CANCEL

5 Initial Usage of TViX

5.1 Making an HDD Folder


1 As shown in the picture below, one end of the USB cable should be connected to the USB connector of the TViX and the other end to the computer.

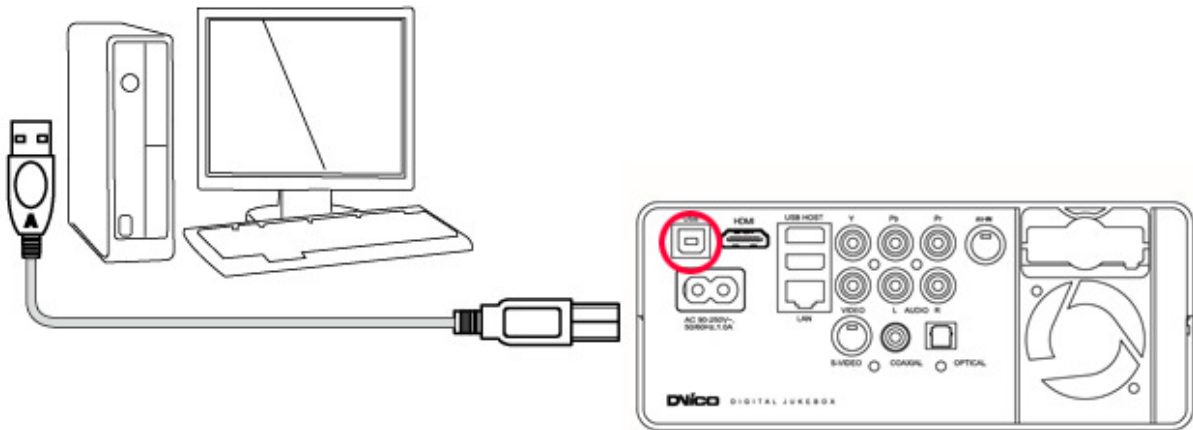


2 After connecting to the PC, turn on the power of the TViX.

3 Double click on the icon 'My Computer' on your monitor and you will see a newly created drive; TViX as shown in picture 'A'.

(The name of the drive can be changed.)

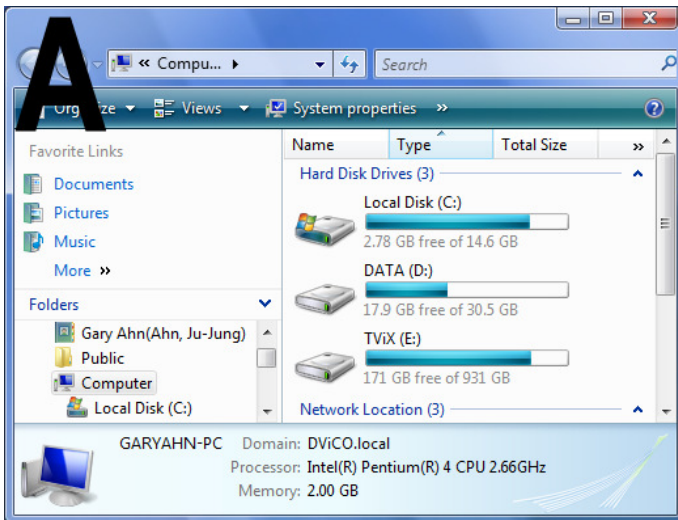

4 For easy usage, double click TViX and make separate folders named MOVIE, MUSIC, and PHOTO. Then store all your files accordingly to each folder.

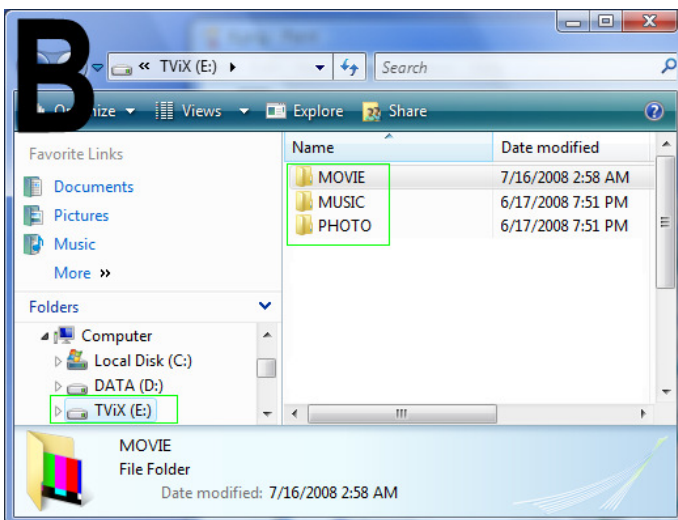

5.2 Movie Playback


When installation is successfully finished, you will see the Main MENU screen. You'd better copy a video file into the MOVIE folder in advance.




1 MOVIE, MUSIC, PHOTO, HDTV, SETUP icons are shown.

2 Select the MOVIE menu by using the Up/Down arrow button on your remote controller.




3 After selecting the icon, press the OK () button.

4 If you want to change the partition of the HDD, press the Jump/Left button.

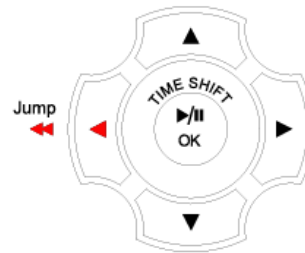


5 Using the up/down button, select the Video file content.

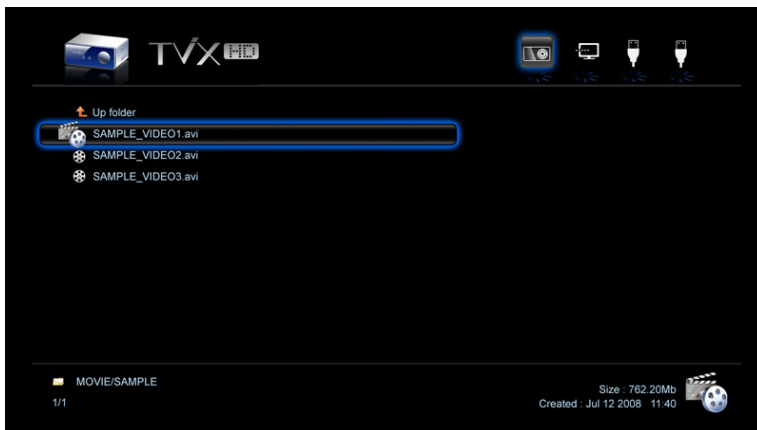

By pressing the OK () button, you will be able to play the video file.



TIP ~


If you want to play the next video, press the NEXT () button.


If you want to play the previous video, press the previous () button.



5.3 Music Playback




You can copy an audio file into the MUSIC folder in advance and play music files..

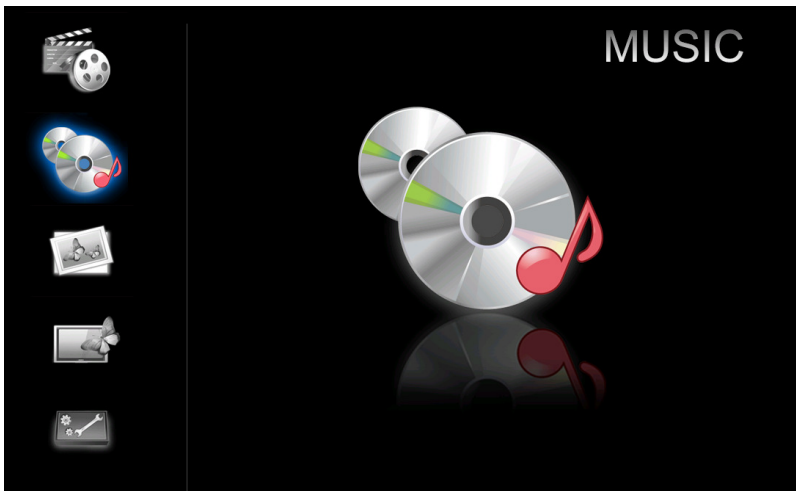1 If you cannot see the MAIN MENU screen, press the MENU() button on your remote controller.




2 Select the MUSIC menu() on the Main screen and press the OK() button.

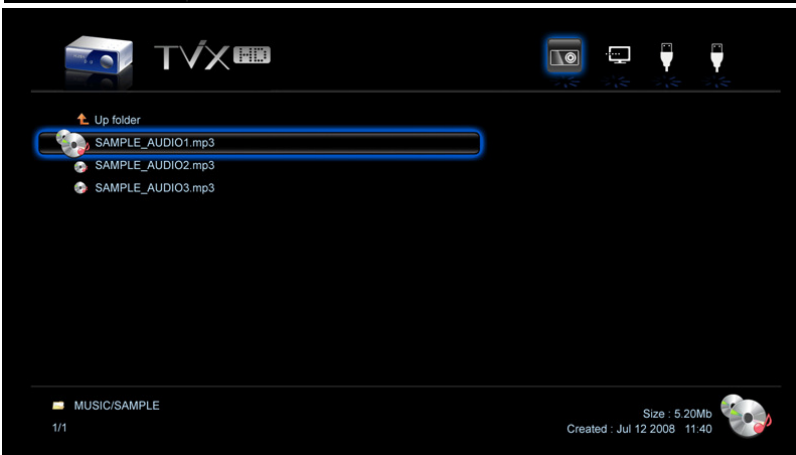


3 You will see the audio file contents that you have just copied.


4 Select the audio file content using the up/down button. Then by pressing the OK button on the content highlighted you are able to playback the audio file.

TIP ~

 
If you want to play the next audio, press the NEXT() button.

If you want to play the previous audio, press the previous() button.

5.4 Photo Playback

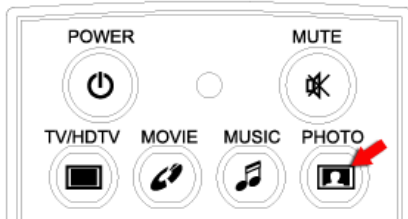

You may copy image files into the PHOTO folder in advance and play the image or photo files.

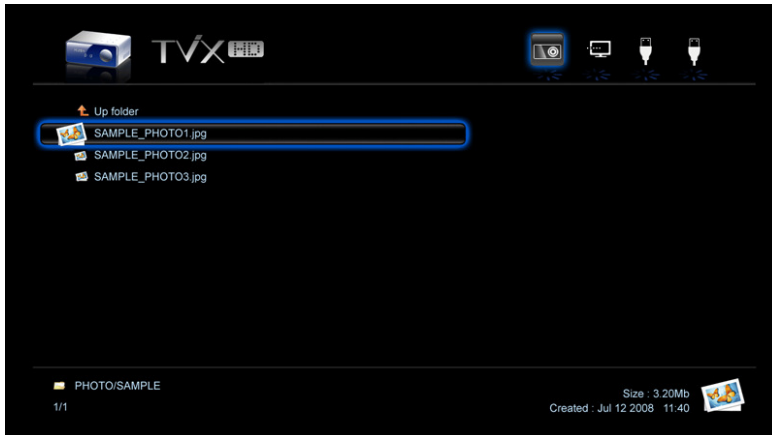

1 You can press the PHOTO button on your remote controller without selecting from the menu screen



2 Press PHOTO () button.

3 You can see the image files that you just copied.



4 Select the image files using the up/down button. By pressing the OK button, you can easily play the image file content.

5 If you want to play the next image, press the NEXT(>>|) button.

TIP ~

You can play the TV/HDTV, Music and Movie as well as the Photos with the remote controller.



If you connect the LAN cable or external USB, Network or USB icon is enabled on the main Menu . We're supporting up to 4 hard disk partitions, 4 network PC, 4 USB1 partition and 4 USB2 partition.



6 Using TViX PVR

- The TViX PVR can play HDTV without a digital TV set-top box with excellent and super-clear display on HDTV screens. The TViX PVR supports standard DTV features, such as EPG and Time-shifting.
 - The TViX PVR has various recording features, including direct recording, scheduled recording, and repeated manual recording, to enable the user not to miss a single program of digital TV..
 - Time shifting is the recording of programming to a storage medium to be viewed or listened to at a time more convenient to the consumer. Being interrupted while watching live TV programs (such as pick up phone calls & answer the door), all you need to do is simply press the OK button to freeze the picture for a period of time and then later press OK again to pick up right where you left off.
 - TViX PVR doesn't support satellite reception.
 - DVICO Inc has no responsibility for recorded programs or files made or distributed for purposes of illegal, commercial, or transactional activities. The party or parties who record or distribute the contents bear all responsibility (Civil or Criminal) direct or indirect.
- ◆ TViX HD R-3300 – A/V IN + optional DTV tuner box.
 - ◆ TViX PVR R-3310 – NTSC Analog TV & ATSC Digital TV + A/V IN
 - ◆ TViX PVR R-3330 – DVB-T Digital TV only + A/V IN (not supported Analog TV)


**** Without internal tuner box, some functions of PVR (EPG or Channels) will not work.**

6.1 Channel Scanning

- 1 When installation is successfully finished, Press SETUP () - HDTV on your remote controller.
- 2 To scan the channels, you can use the Start Channel Scan menu on the SETUP-HDTV menu.




- 3 To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.
- 4 The channel scan takes about 5~6 minutes.

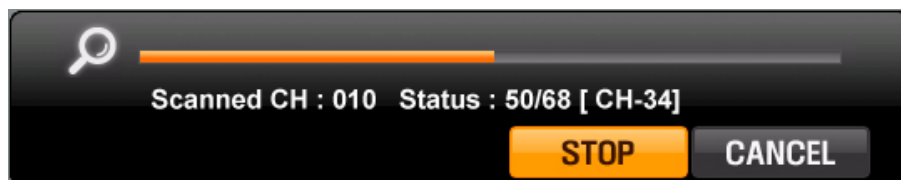

- 5 To stop the channel scanning, Click on STOP () button on the remote control or select the STOP on the scanning window.
- 6 After scanning, you have to configure the time zone on SETUP-HDTV, If you want to use the EPG guide, you have to set your time zone correctly.

※ Checking Digital signal Reception

- ① Press the INFO button on the remote control.
- ② The signal-strength meter will appear on the INFO window.
- ③ If the meter indicates weak signals, adjust your antenna to increase the signal strength. Continue to adjust the antenna until you find the best position with the strongest signal.

Display  OSD when you press wrong keys.

6.2 Using TViX PVR



: Select TV icon on the main menu to play the TV mode (Without tuner box, this menu is not available.)



: Press TV/HDTV button on your remote controller to switch the TV mode




: Press A/V in button on your remote controller to switch the external input mode

6.2.1 Channel switching

1 Press CH +/- button to change the TV channels.

2 You can also enter the channel number by using the numeric keypad on the remote and the channel will change after a few seconds.




3 To check the scanned-channel list, press the GOTO button () in TV mode.


You can change the channel by using Up/Down and OK button.



6.2.2 Instant recording

- This function records the currently displayed channel.
- You cannot change the channel while recording.

• Select the desired channel to record while watching and then press the REC button () to record.


• Press the STOP button () to stop recording, or, when the recording duration is reached, the TViX will stop recording.

• The recorded file is stored to the hard disk of the TViX in a folder named PVR.



• The file is saved with a name of the form "YY-MM-DD_program name.tp"

The hard disk must be formatted using the NTFS file system. If the FAT32 file system is used, an error message appears.

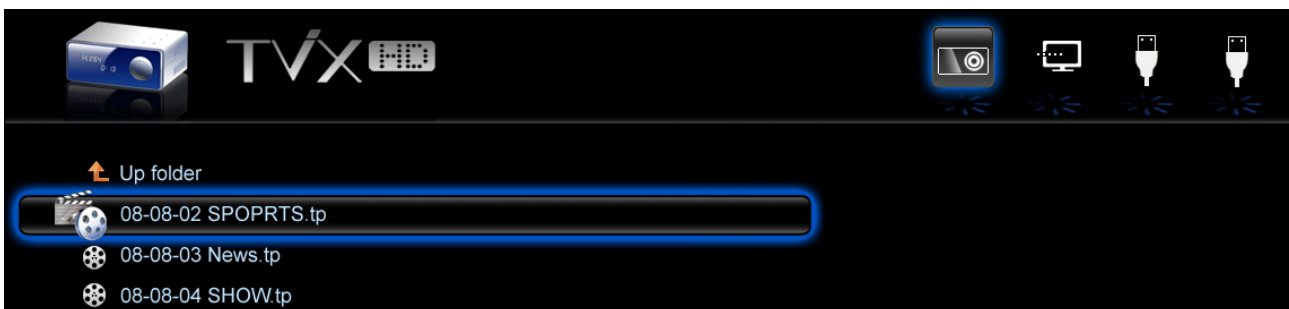• livepause folder is a temporary folder for time-shifting, so you may ignore this folder name.






- Clicking on the REC button() changes the recording duration in the sequence shown below. Free Space->30min->60->90->120->180->240. When recording, you can see red-round OSD() on the right-top of the screen. **OTR:90 Min.**



- When recording, if the available storage space runs out, the recording will automatically stop.



- When recording or viewing, Press the INFO button() on the remote control, and you can see channel information.



- If the available hard-disk space is less than 50MB, recording will not work. If the available hard-disk space reaches 10MB or less when a recording is in progress, it will stop automatically and show “No space” on the OSD.

Record Notice

- The first partition of the internal hard disk must use the NTFS format. FAT32 format will cause an error message.
- When the signal is weak or unstable, recording cannot work properly.
- When the hard disk is unstable, recording cannot work properly. So you must sometimes run Check Disk.


6.2.3 Using DTV EPG Guide

DTV EPG(Electronic Program Guide) shows the guide obtained from the real-time broadcast data stream. DTV EPG function is not supported in analog TV or external input (A/V-in)



Press the Guide button() in DTV mode to see an EPG window similar to that shown below.

Select the desired channel to record or watch and then press the View or Record button to tune the channel or schedule the recording.

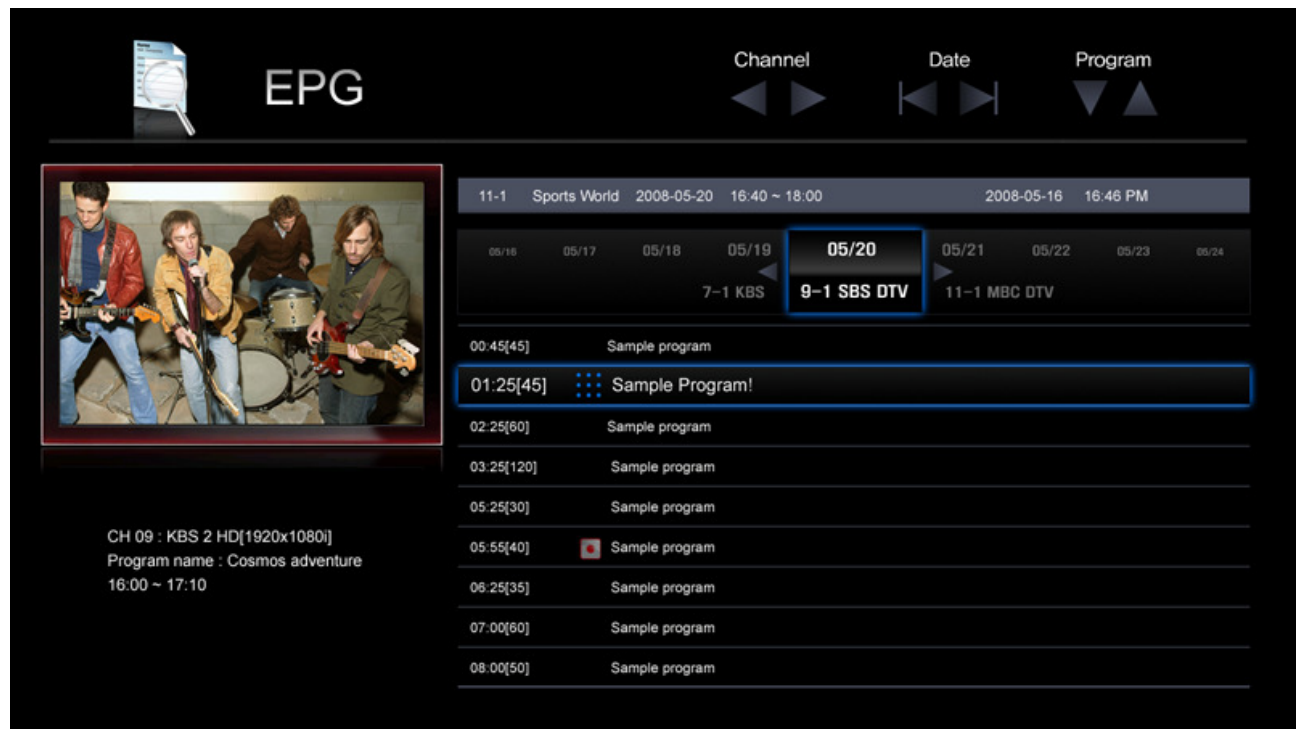

Open/Close an EPG Guide window.



Change the displayed EPG Date backward.



Change the displayed EPG Date forward.



Change the displayed EPG channel.



Change the EPG list highlighted item.



Select the program to schedule by using up/down button and press OK button.

Sample Program

Do you want to schedule?
SBS Sample program

OK

CANCEL

TViX will automatically power on 5 minutes before a scheduled recording time.

E.g., if you schedule a 4 o'clock recording, your TViX will turn on at 3:55 and begin recording as scheduled.

6.2.4 Manual Recording


1 Manually scheduled recording is available in the TV mode. Scheduled times are based on the TViX internal clock, as shown on its VFD, so please adjust it to the correct


time under the setup menu. Press BOOKMARK/SCHEDULE button ().



2 To add new scheduler, press ADD/DELECT () button. You can set Date/Time/Duration/channel in this menu. Click on the CH button to change the station. The cycle option sets the day of the week.

You can change the line with Next or Prev button. ( )

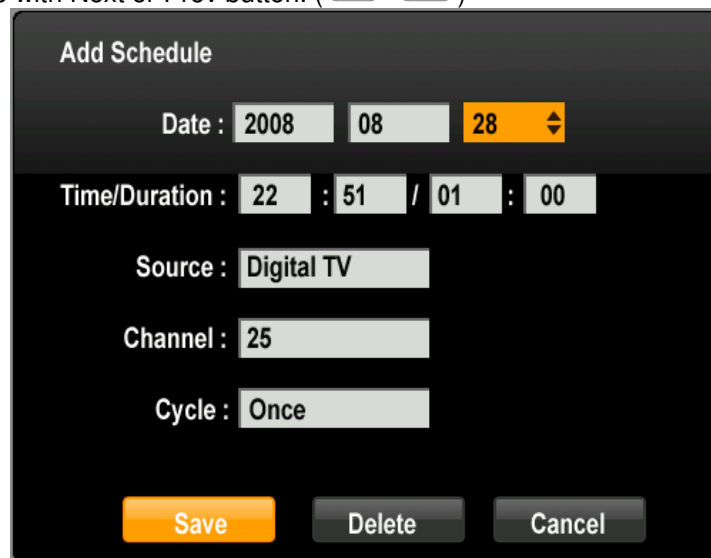

3 To Edit/delete the scheduled list, press the BOOKMARK/SCHEDULE button (). Click on the up/down button to select a specific listing and then you can edit or delete it by pressing the **OK** buttons. Press stop or BOOKMARK/SCHEDULE button on the remote control to exit the list.

4 TViX will automatically power on 5 minutes before a scheduled recording time.






 

E.g., if you schedule a 4 o'clock recording, your TViX will turn on at 3:55 and begin recording as scheduled.

6.2.5 Using Time-Shifting

Time shifting is the recording of programming to a storage medium to be viewed or listened to at a more convenient time. If interrupted while watching live TV programs (for example, to pick up phone calls or answer the door), you simply press the OK button to freeze the picture for a period of time and then later press OK again to pick up right where you left off. The Time-shifting buffer is preserved when you change the channel. (Channel changing is not supporting with current firmware in the time shifting mode)

Note: You cannot use the DTV time-shifting on FAT32 partitions, so we recommend that you format your SATA HDD to NTFS.

DTV Time shifting requires a maximum HDD space of 9G/hour.

	<p>Start/Pause the time-shifting function. Pressing the button alternately starts pausing or resumes from pausing to watch the TV in time-shifting mode.</p> 
	<p>Stop the time-shifting function and display live TV.</p>
	<p>Go to the start position of the time-shifting buffer.</p>
	<p>Go to the Live position (end of the time-shifting buffer).</p>
	<p>FF/REW in time-shifting mode.</p>  <p>you simply press the Up or Down button to jump 15 seconds.</p>


6.2.6 Using A/V-in (External input)

The TViX provides a composite or S-VHS A/V input.

The TViX series also functions as a personal video recorder or archiving machine, allowing you to capture analog video and store it in a digital format. It can capture or time-shift the external analog video as well as analog TV signal, and then record it in superb high-quality digital format.

Connect the output of the external device to the dongle cables included. Then connect this dongle cable to the TViX A/V IN port. Do not connect this cable forcefully or you can damage the TViX unit.

Configure the external device's A/V output to NTSC(480i)/PAL(576i) and analog sound.

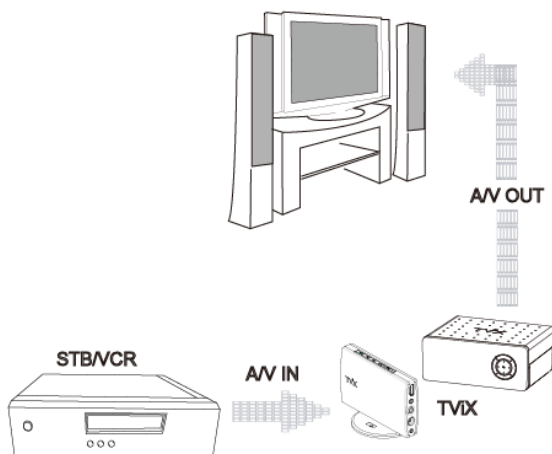

1 After connecting A/V-in cable, turn on the power of the TViX.

2 Press AV-IN button () on your remote controller, and switch to Video or S-video.


3 AV-IN button is switched to Video or S-video.
When using the A/V-in mode, you can record or time shift, just as in TV mode.


7 Using the remote control

7.1 Descriptions of Each Buttons


Basically, for playback of multimedia files you choose the file you want by navigating to it with the menu buttons and left/right and up/down arrow buttons and then press the OK button.


7.1.1 Video Playback

When you press the MOVIE button() on your remote controller, only the TViX MOVIE folder contents are displayed on the TV Screen.

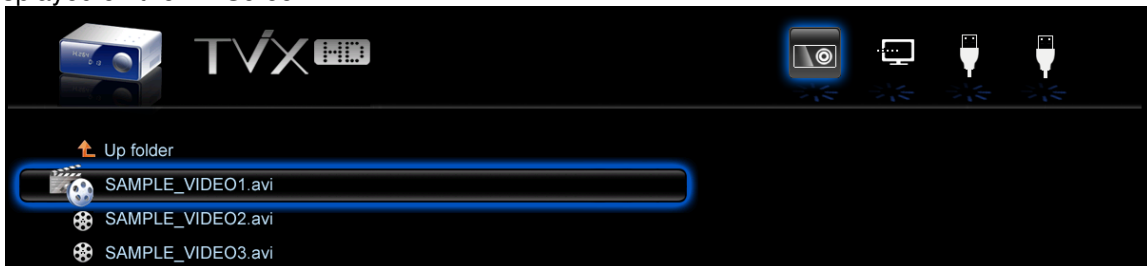










This only applies to the active partition if you have more than one partition.

Press the JUMP()button on your remote controller to select another input source.

Display  OSD when you press wrong keys.

<NOTE>

	Play or pause file. 
	Stop playing a file. 
	Go to the next file. 
	Go to the previous file. 
	<p>First Press : Shows information of the contents.</p> <div data-bbox="271 1579 742 1859"> <p>File Name : Sample.avi File Size : 687.08 MB Elapsed Time : 00:02:30 Total Time : 01:00:54 Video Info : MPEG4, 640*480, 25fps Audio Info : MPEG, 2ch, 16.0khz, 16kbps Repeat Mode : OFF Audio/Total : 01/02</p> </div> <p>Second Press : Shows the elapsed time corner of the screen). (the progress bar is displayed on the upper left hand)</p> <div data-bbox="1005 1870 1165 1915"> <p>01:06:09</p> </div> <p>Third Press: Show remaining time</p> <div data-bbox="686 1960 845 2004"> <p>-01:50:09</p> </div> <p>Forth Press: Information off</p> <p>Pressing Info button while you are not playing files shows remaining HDD space.</p>



4:3 Letter Box / 4:3 Pan & Scan for ordinary TVs / 16:9 for Wide TVs such as HDTV or Plasma TV.

If the ratio of the TV is 4:3, select the 4:3 letter box or 4:3 Pan & Scan. If the ratio is 16:9, select 16:9.

① The 4:3 Letter box can show the original ratio of the multimedia file in 16:9.



② The 4:3 Pan & Scan will adjust the image of the 16:9 multimedia file to the 4:3 of the TV screen by scaling the image. (Currently this mode is not supported)



③ 16:9 can adjust any ratio of the multimedia file to the TV screen with the original image.



Pressing the Zoom button while you are playing files shows zoom OSD as 2X→4X→8X→1X. While in Zoom mode, you can scroll the video by pressing the arrow buttons.



First Press : Shows the Subtitle OSD.

- Change subtitle size : press Left/Right button on the subtitle mode. It is not available without subtitle file.
- Change subtitle position : press Up/Down button on the subtitle mode. (.smi only)

Subtitle color or outline is configurable on the SETUP menu.

Supports .SUB (bitmap) + .idx subtitle files

You can go to subtitle file selection mode by pressing the TITLE button (next to MENU) on the remote control. You can navigate folders and files and press OK button on a subtitle file you want.

You can change the subtitle sync by using CH +/- button on your remote.



Pressing GOTO button while you are playing files, You can choose the time. After choosing you can play directly. The present playing time will be displayed with the GOTO function.





FF/REW Button

Pressing FF button while you are playing files, you can change the FF mode.
2X→4X→ 8X →16X → 32X.

Up/Down Button : 15 seconds skip or 15 seconds backward.



(Down button) : Back 15 seconds.

(Up button) : Skip 15 seconds.



is used to delete the file or folder from the TViX Local hard disk.

When you do delete files or folders, you must run the HDD check disk periodically.



During playback You can set sleep time by pressing function key repeatedly on a remote controller. SLEEP ON will blink for 3 minutes before turning off. (require updating to the latest firmware)




In these menus, you can adjust the Contrast, Brightness, Hue and Saturation by pressing the left/right arrow buttons on the remote.



If you stop the movie, the stop position will be automatically saved and you can resume it later anytime by pressing the "bookmark" button on the remote controller.

- save up to eight bookmarks on eight individual files. (It cannot save eight bookmarks on a single file.)
- Bookmarking works for AVI, MPG, VOB, CAT, M2P video files only.
- A video file where the folder is setup with a password cannot be saved.
- When replaying the same file, only the last play position will be saved (thus, bookmarked).
- A file deleted from the hard disk will be automatically deleted from the bookmark list as well.

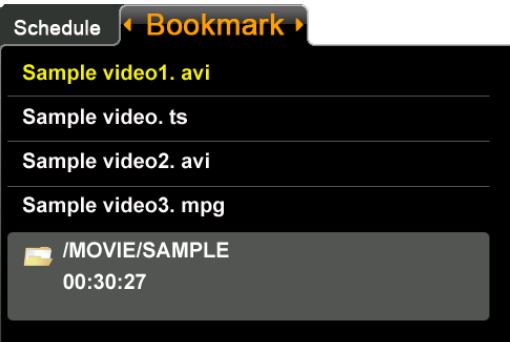

Pressing AUDIO button while you are playing multi audio files, you can change to alternate audio tracks.



Select the subtitle file manually. (require updating to the latest firmware)



Adjust the play mode to repeat Track, repeat All or repeat off.


 






7.1.2 DVD Navigation

For playback of DVD files copied to the HDD, navigate to the **VIDEO_TS.IFO** file and press OK.

Full DVD navigation works as with a standard DVD player.




< DVD Jukebox Keys >


	Play/Pause (when a movie is playing). Select file (in the menu screen).
	Stop playing.
	Go to the next chapter
	Go to the previous chapter
	Show DVD information.
	Go to the DVD root menu.
	FF/REW Button Up/Down Button : 15 seconds skip or 15 seconds backward.
	Change the audio the available tracks. (International dubbing, DOLBY, 2CH, 5.1CH, DTS etc.)

** The operation of “arrow” and “VOLUME UP/DOWN” is the same for Video operation.

7.1.3 Audio Playback




When you press the MUSIC button() on your remote controller, Only the contents of the TViX Music folder will be displayed.

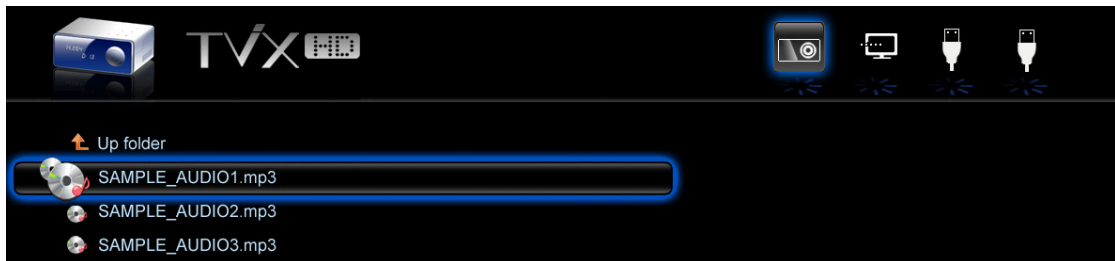


It applies only to the active partition(first partition) if you have more than one partition.



Display  OSD when you press wrong keys.

If you press audio file, then you will get the screen of music window.

You can choose another song to hear in this music window.

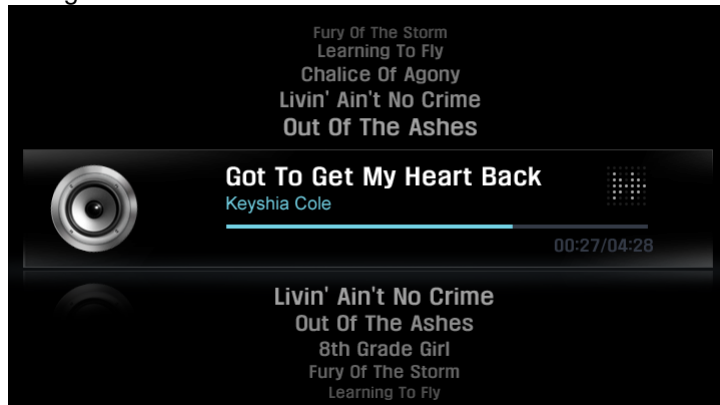

** Some functions may require updating to the latest firmware.

< NOTE >



Play or pause file.



Stop playing



Go to the next file.



Go to the previous file.



Show the information of the audio file. If there is no Tag information, it displays basic file information.



FF/REW button.
CH Up/Down Button : 15 seconds skip or 15 seconds backward.




Shuffle Function (Random Playback), Press the Shuffle button to play the files of the present directory randomly.




Adjust the play mode to repeat Track, repeat All or repeat off.


7.1.4 Image Playback



When you press the PHOTO button() on the remote control, only the contents of the TViX PHOTO folder will be displayed.

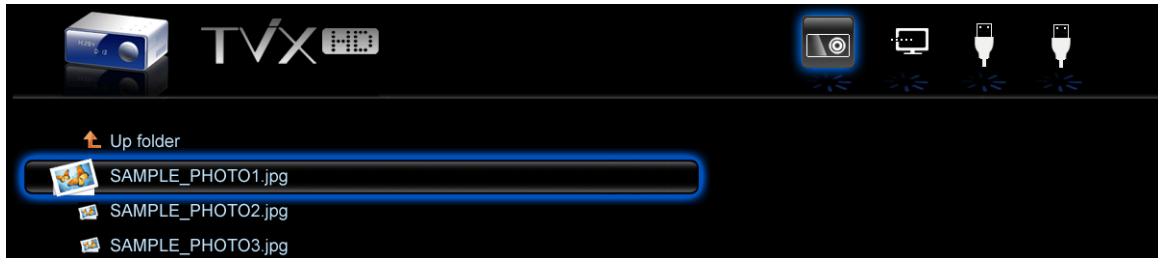

It applies only to the active partition(first partition) if you have more than one partition.

Display  OSD when you press wrong keys.

< NOTE >



Play or pause file.



Stop playing



Go to the next file.



Go to the previous file.



Show the information of the image.



Rotate the image.



You can change and set the size of the picture with the ZOOM.



With Zoom mode, you can scroll the image by pressing the arrow buttons.

- You can set the slideshow delay or slide show effect at the SETUP-MISC menu.
- Some non-standard JPEG files may not be displayed..[Progressive jpeg is not supported].

7.2 Extra Features

7.2.1 Using the AutoRun Function

When you want to play music with the TViX, but do not have any display devices, the following function may come in handy.

- 1 Make a folder and name it, "autorun" and place it in the root directory of the First partition.

Name	Date modified
Autorun	8/1/2008 2:27 AM
Movie	8/1/2008 2:27 AM
Photo	8/1/2008 2:27 AM

- 2 Copy media file(s) or a text list file in the "autorun" folder.

<< >> Autorun <input type="text" value="Search"/>	
Views	
Name	Date modified
Autorun1.mp3	9/26/2007 11:40 PM
Autorun2.mp3	9/26/2007 11:40 PM
Autorun3.mp3	9/26/2007 11:40 PM

- 3 If you want to change the setup, push the SETUP button on the remote controller. Then go to the SETUP-SYSTEM tab. Set AutoRun option to ON. If you set the AutoRun option to OFF, the function will not work. If you select 'Shuffle,' files will play randomly.

- 4 After setting the configuration, turn off the TViX and then turn it on again. The TViX will play the media file from the under '/HDD1/autorun'.

<< Using WinAMP Playlist (.m3u or .pls) >>

- 1 Connect TViX to PC.
- 2 Use the "Winamp" application to form a playlist of files stored on the TViX.. (See figure below)
- 3 Select Save playlist from the Winamp File menu and save the list on the same partition where the opened files are stored.



- 4 Disconnect TViX from PC by using Safely Remove Hardware tray icon.

7.2.2 Using File Copying


TViX supports File Copy functionality without Using PC. You can now copy Contents from external USB hard disk to the internal hard disk of TViX and also Copy the contents within the internal hard disk of TViX.


TViX internal HDD < -- > internal HDD,


TViX internal HDD < -- > Network DISK (network driver cannot be written in the NFS)


TViX internal HDD < -- > external USB DISK (except nonstandard devices.)


- 1 Select the folder containing source files. (Currently, don't support folder copying)
- 2 Press Function key and select FILE SELECT icon.

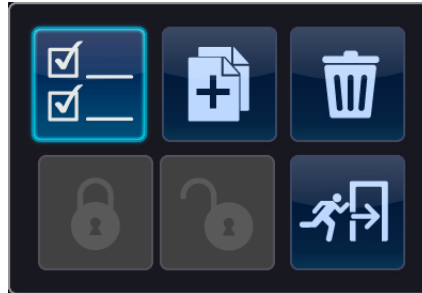


- 3 with SELECT mode popup(), Select source file by using Up/Down key and OK button. Do not change to another folder in this mode. If files are selected, selected files are activated.

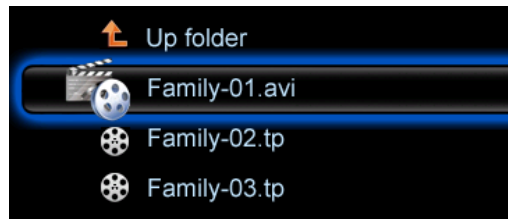

- 4 After selecting the file, press the Function key again and then select the COPY icon(). To cancel copying, press the Function key again and then press cancel icon.

- 5 In case of paste mode, you can use arrow keys, so that you can change the target folder. Navigate to the folder where you want to copy, and press the Function key again then select the PASTE icon().


- 6 You will see progress pop up after pressing PASTE icon as shown below

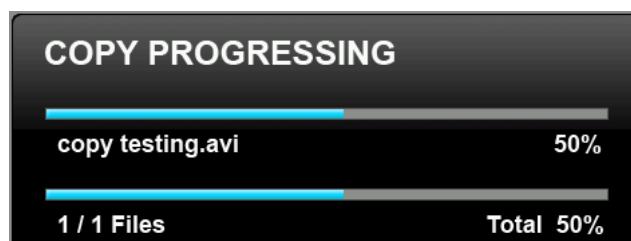

7.2.6 Folder Security

TViX supports folder protection by assigning a password to the folder.

- 1** Select the folder that you want to password protect.
- 2** Press the Function button on your remote controller.
- 3** Select the Set Password icon to set up the password.
- 4** Press a 1~8 digit number from the Numeric key on the remote (Ex: 1234). Press the OK button to complete set up. Perform the SETUP-SYSTEM-Load default settings to clear the password if the Admin Password is lost.

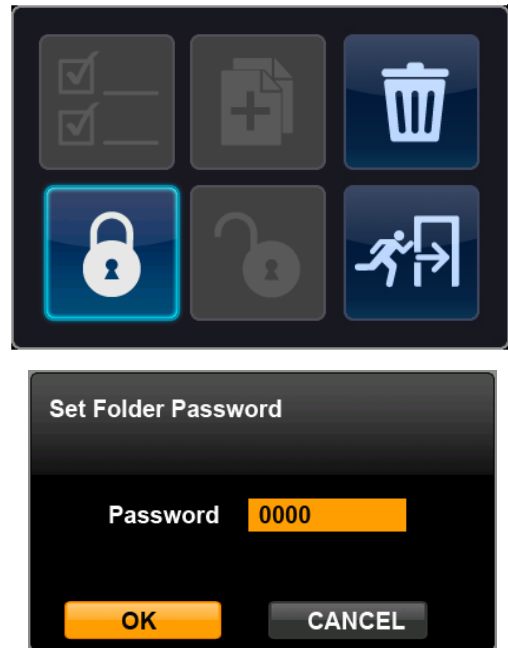

< < Notice >

- The Set password and Remove password icons will be activated when a password is assigned to the folder.



File select



File copy



File Paste



File delete



Set password



Remove password




Cancel/Exit

- If you insert a wrong password, TViX automatically goes to the file-selecting page.
- Perform the SETUP-SYSTEM-Load default settings if Admin Password is lost
- The password should consist of numbers only.
- You cannot delete a folder protected by a password with the delete key. Remove the password first.

7.3 LAN Connection

7.3.1 Connect PC via Network

< When connecting the computer directly to the TViX >

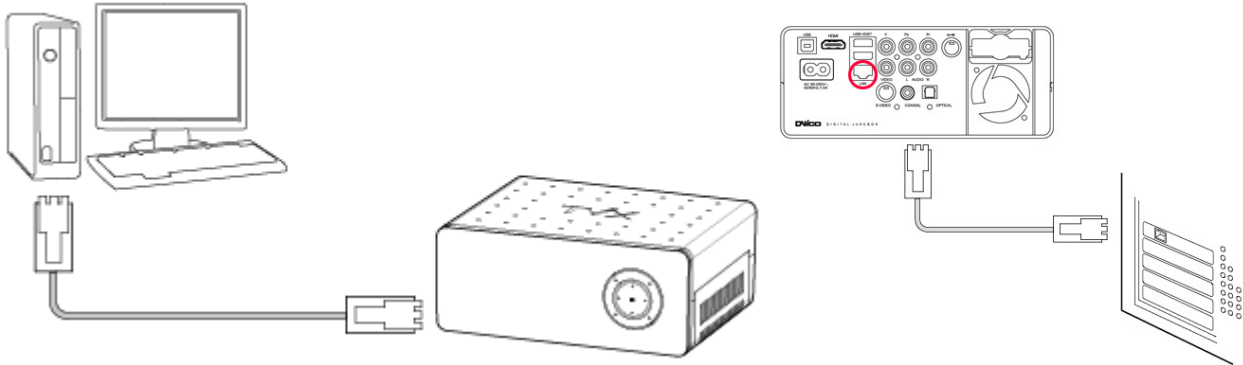


Connect the LAN cable to the LAN port of both the TViX and the PC.

TIPS

In this case, you generally use a LAN cross cable type.

If the computer's LAN card was connected to an Internet line, you can install an additional LAN card to your PC and connect that LAN card to the TViX.

< When connecting with IP Router or Hub >

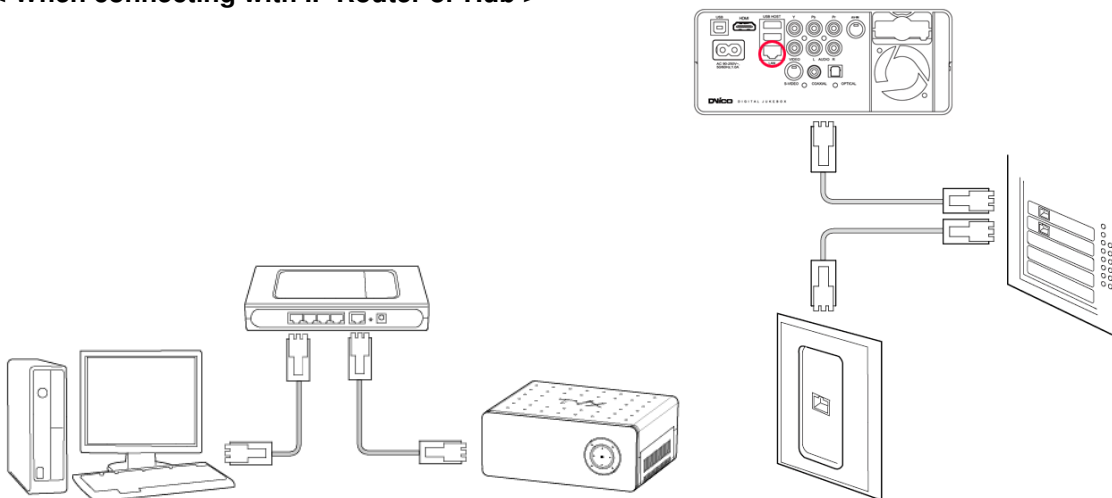

Connect the LAN cable to the LAN port for an IP Router or Hub.

TIPS

In this case, you generally have to use Direct LAN Cable type.

● **SAMBA mode** : You can play the file via network without special Software program, but the speed is lower than NFS mode. (Currently, do not Support in Vista)

● **NFS mode** : You must install the TViX NetShare utility on to your PC, but you can play the TP or DVD jukebox without stutter.

We recommend sharing files using the NTFS file system. The FAT32 file system does not contain enough information to create a lasting file name, so TViX doesn't load the file after changing the file name.


* Please connect your TViX to the PC only with the enclosed USB cable.

< Wi-Fi Connection >

2200 series is supporting optional wireless network connection only.

Connect the USB module into the enclosed cradle after connecting the AP Router to a PC.

You should not connect the USB module to TViX without cradle. If you connect it by force, the TViX can be damaged.

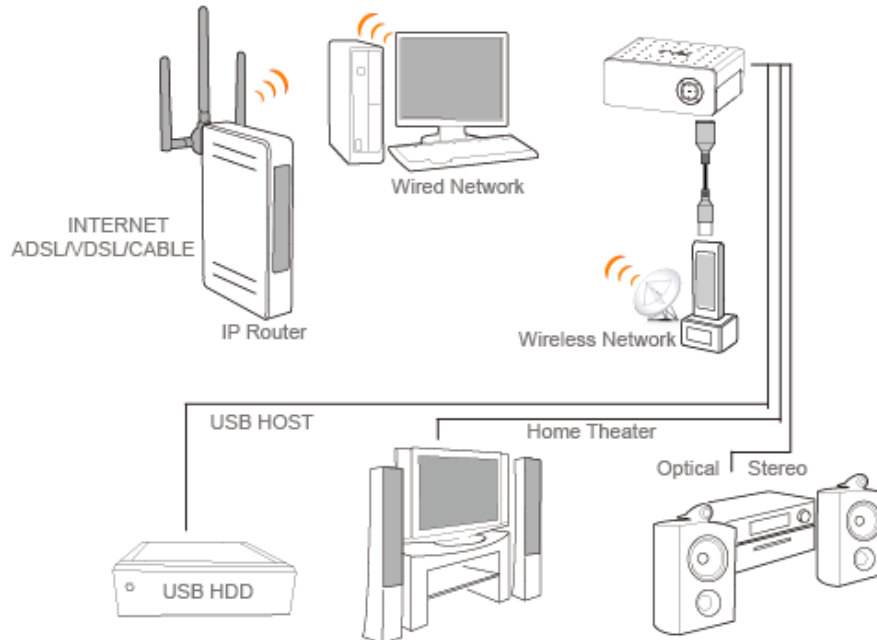

** For detailed Wi-Fi instructions, please refer to Wireless Network.


7.3.2 TViX NetShare Installation

1 Most likely there will be an updated NetShare version on our web site (www.tvix.co.kr/eng) You may download and install using the latest TViX Netshare installer or install TViX Netshare from the enclosed TViX CD.




2 Run TViX Netshare installer and follow the on-screen prompts to install software.

- 3 The “Choose Destination Location” window will appear. Click on “Next” if you want to install the Net Share in the default directory. Otherwise, you can choose a different directory by clicking on “Browse”.

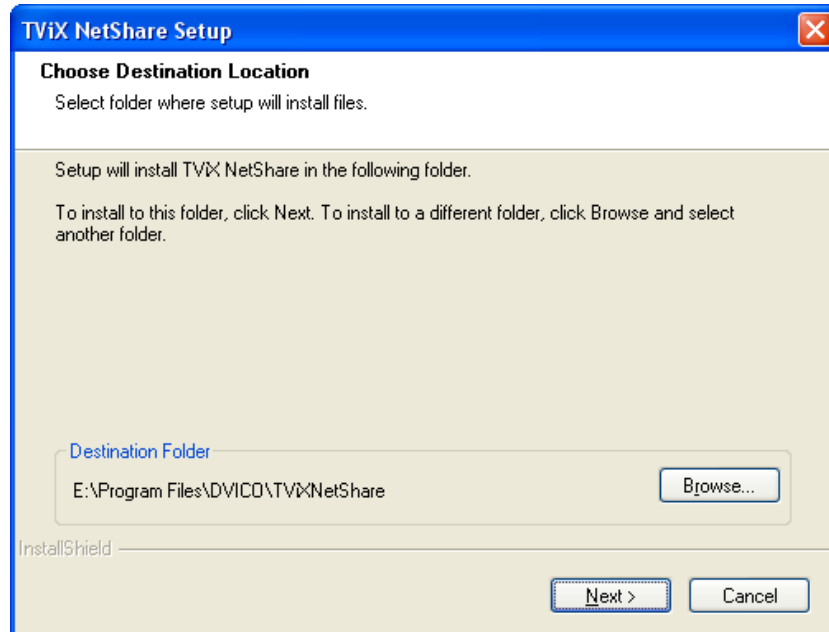


- 4 Please select the location where you would like to share the folder. You may click the browser to find a shared folder.

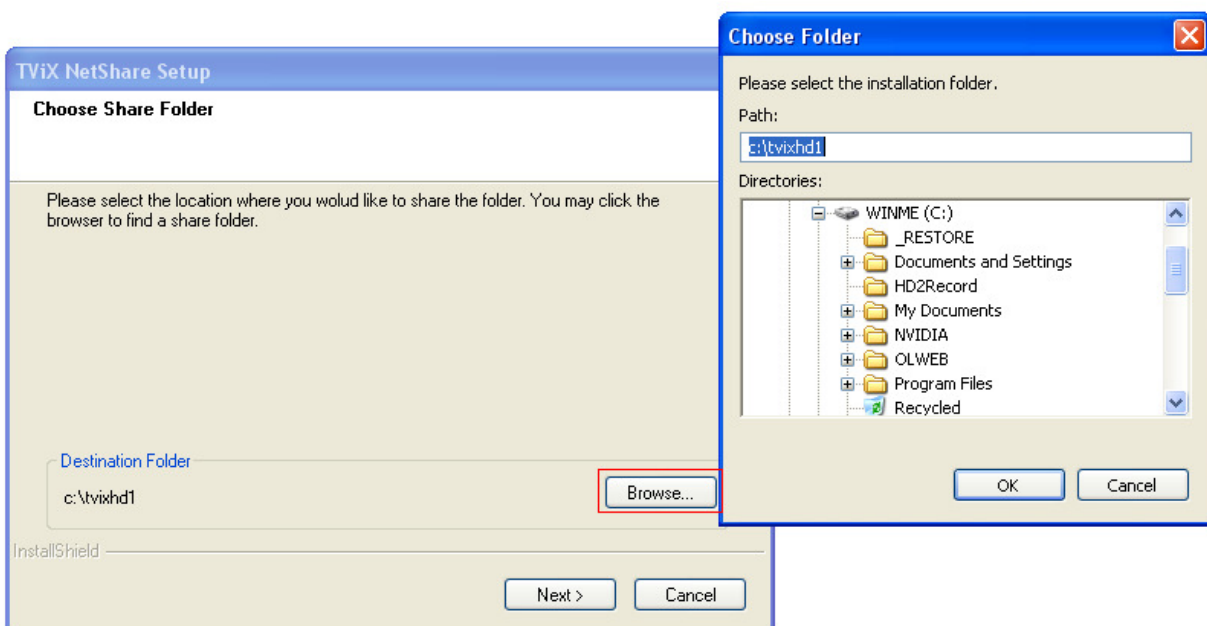


We recommend to share files using the NTFS file system.


- 5 The “Setup status” window will appear.

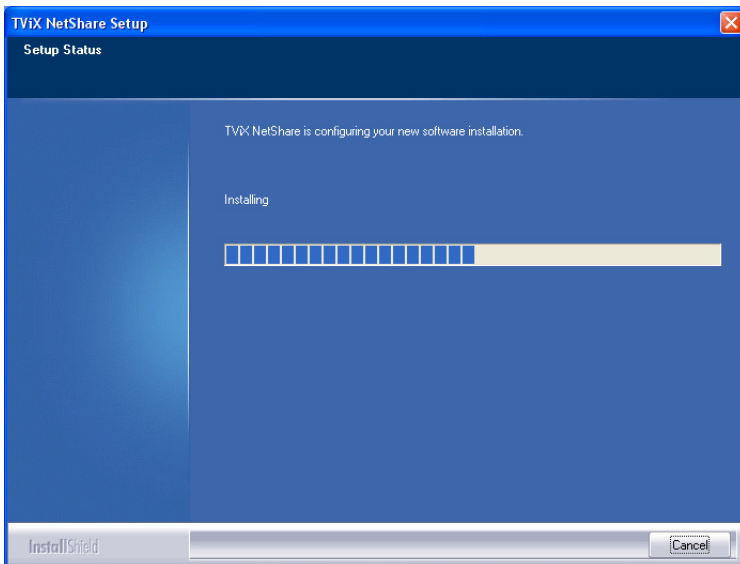

6 Press YES button if you want to run the TViX Net Share automatically.

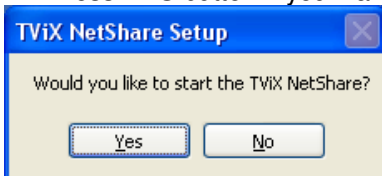

7 By clicking the Finish button, the software installation is done.

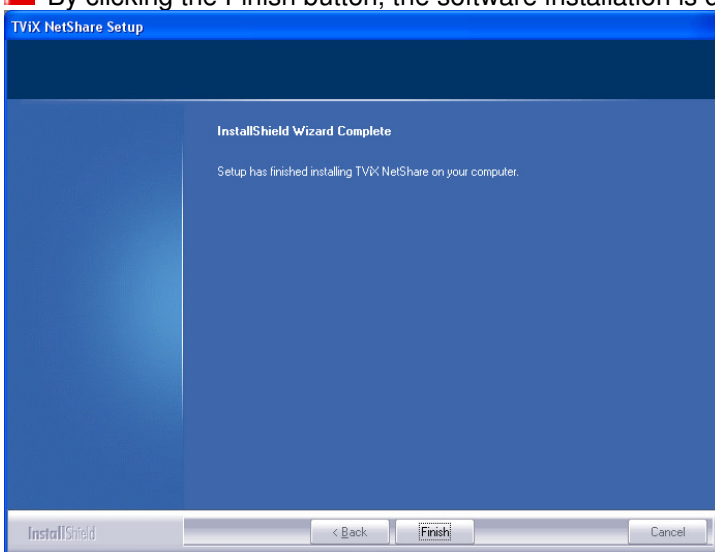


8 Press “Unblock” for the Windows Security Alert.



7.3.3 Using TViX NetShare

1 Click Start, point to Program->DVICO->TViX NetShare.



If TViX Netshare is already running, you don't need to run this program again.

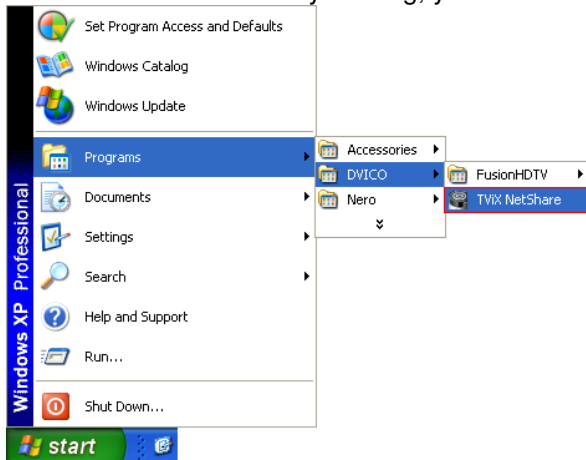

2 After starting the Net Share program, you can see the NetShare icon in the tray..



3 Start the setting by right clicking the NetShare tray icon at the lower-righthand corner of the screen.

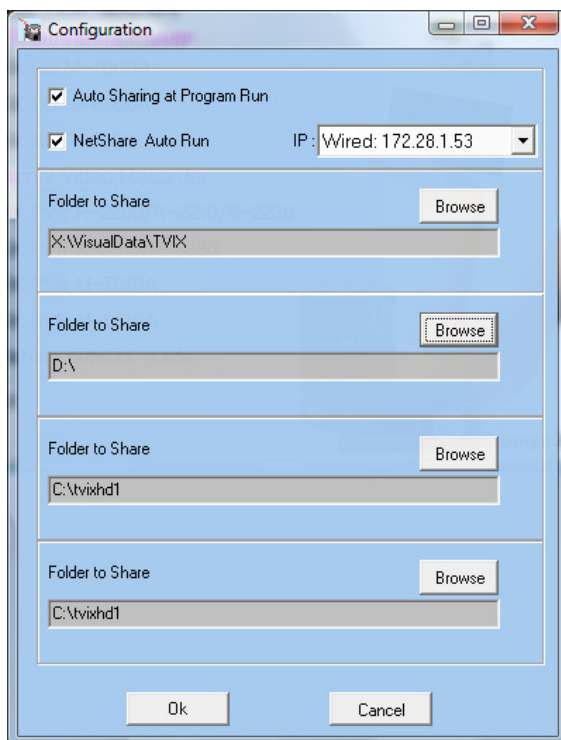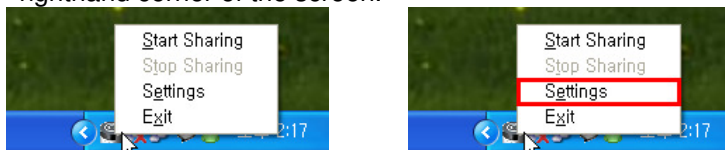







- Start Sharing : Used to start the sharing
- Stop Sharing : Used to stop the sharing
- Settings : Used to set the share folder
- Exit

4 After running the NetShare software application on the system, right click on the NetShare icon and select Settings.

- NetShare AutoRun : used to autorun when Windows re-starts.
- Auto Sharing at Program Run : used to start sharing automatically at program startup.
- Folder to Share : used to Select the folder and Files from the drives shared by Clicking on the Browse icon. In case of FAT32 file system, TViX doesn't load the file after changing the file name.

7.3.4 Sharing of Multi folders

1 After running the Netshare software Application, right click on the Netshare ICON.

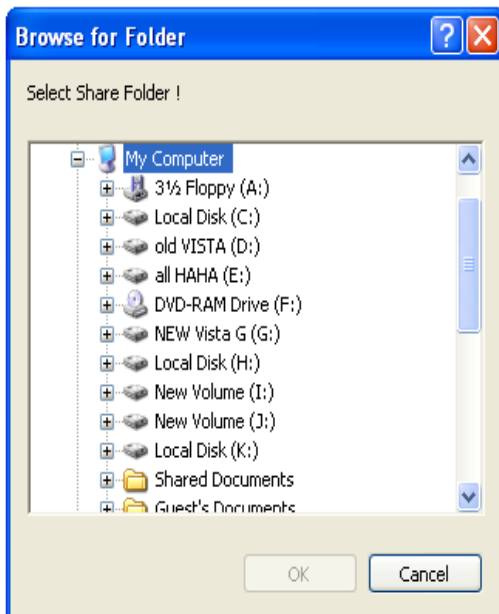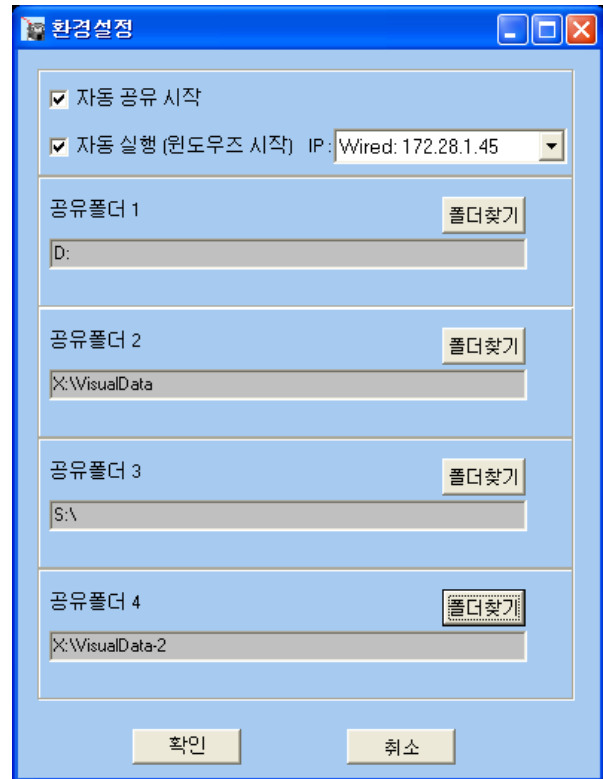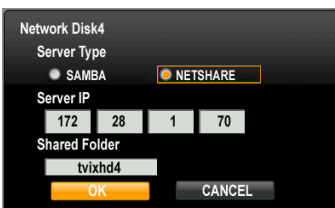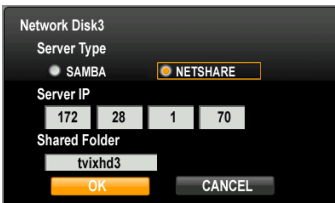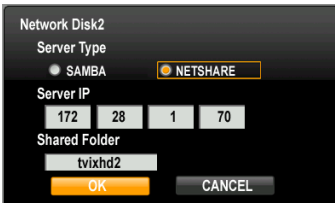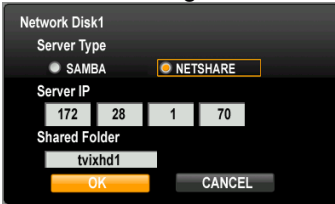

2 Click on Browse, Corresponding to Folder 1 to Share.

3 Select the Appropriate folder, Containing Media Files from desired Drive and Click OK.

4 Again Click on Browse, Corresponding to Folder 2~ Folder4 to Share.


5 Select the Appropriate folder, Containing Media Files from the desired drive and Click OK.

CAUTION


If you press the stop sharing when the network is connected, you can see "TViX Sharing closed." On the setting feature.

You must again Press the "start sharing" on the tray window for network Sharing to start.

7.3.5 Set Network Configurations Under Windows XP (SAMBA mode)

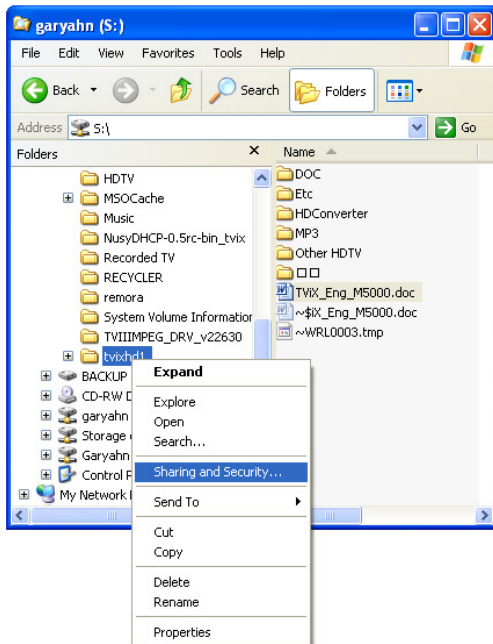


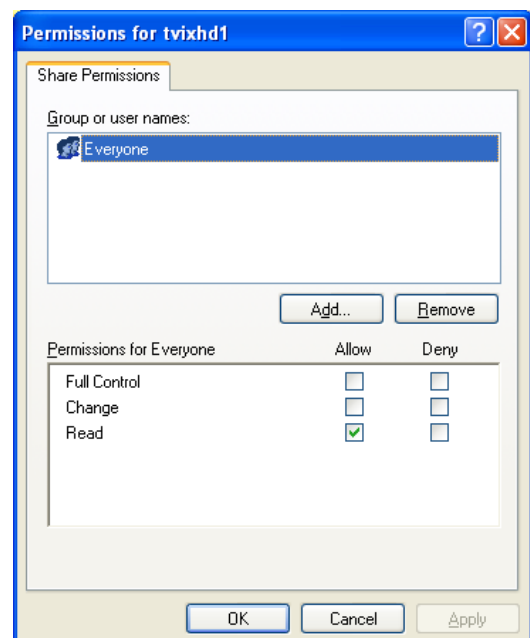
1 Select the folder you want to share. Right-click that folder and click 'Sharing and Security' in the popup menu.

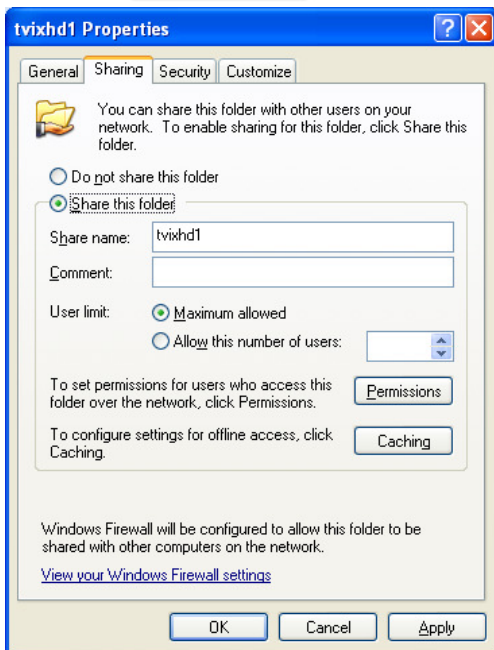


2 Check 'Share this folder' on the network and type in the share name 'tvixhd1 (this is the only available one at the moment)'.

3 Use 'Everyone' if 'Everyone' is displayed, otherwise you don't have to change anything. Also, add 'Everyone' to the security tab.

4 After that, the shared folder will be displayed like the following picture.  **TVIXHD1**




- 5 Move to 'Settings' > 'Control Panel' > 'Administrative Tools' > 'Computer Management' > 'Local Users and Groups' > 'Users', and double click 'Guest'.

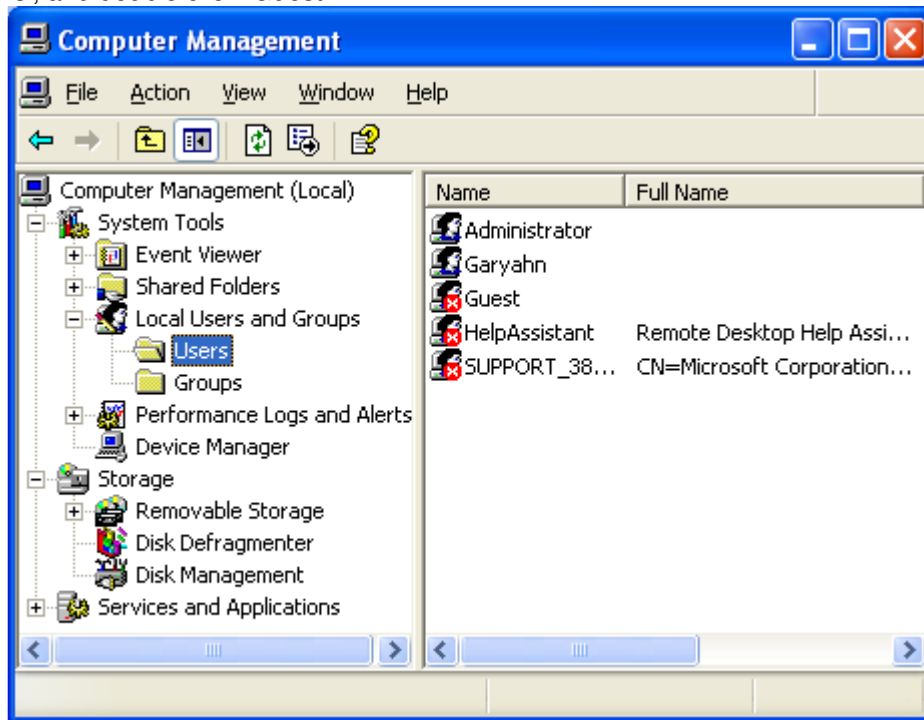


CAUTION

This is for Windows XP Professional. Windows XP Home users cannot see this window. If you cannot find 'Administrative Tools' in the Control Panel, click "Switch to classic view" in the upper-left corner of the screen.


- 6 Uncheck 'Account is disabled'

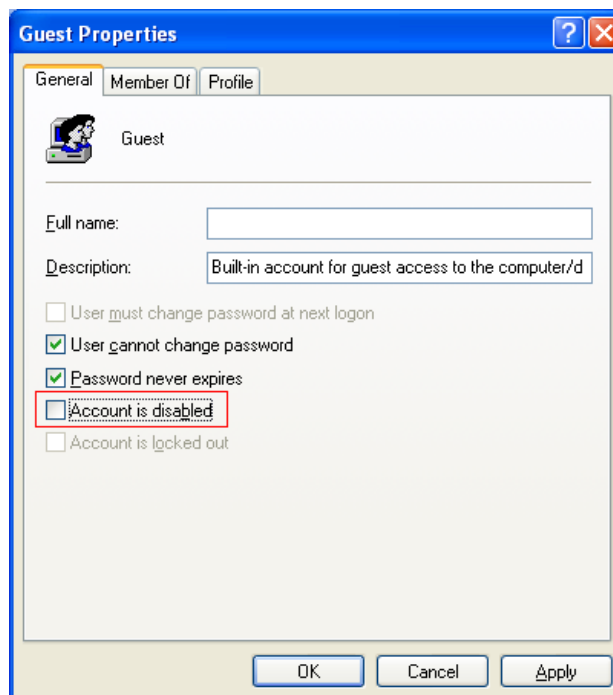


7 'GUEST' must be shown as the following image (a red X mark should not be shown on 'Guest').

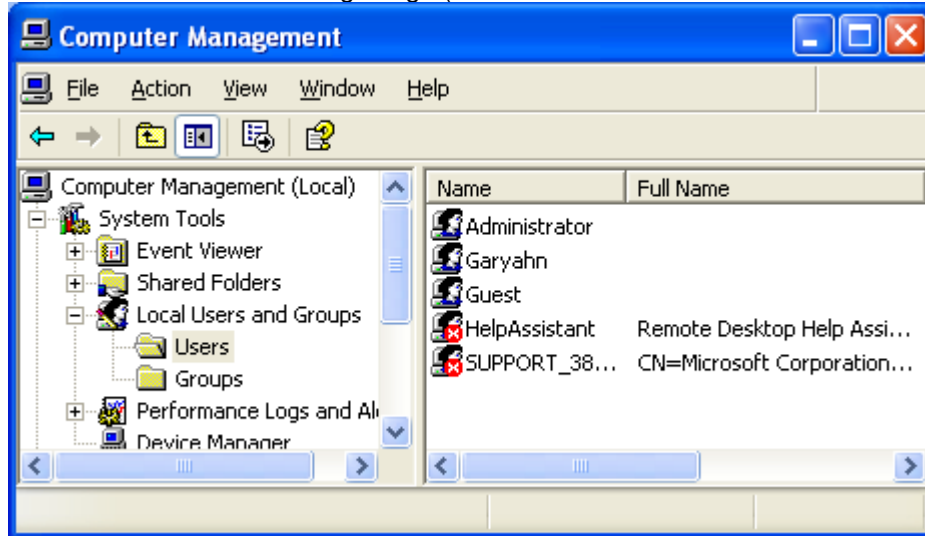



8 Move to 'Control Panel' > 'Network connections', and select 'Properties' by right click on the mouse.

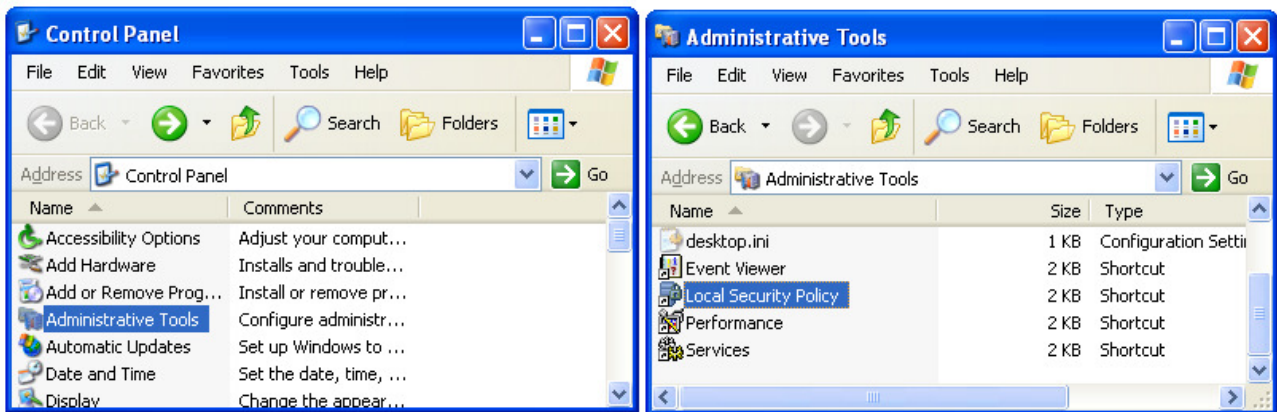


9 Remove "Guest" from the 'User Rights Assignment' > 'Deny access to this computer from the network' option.

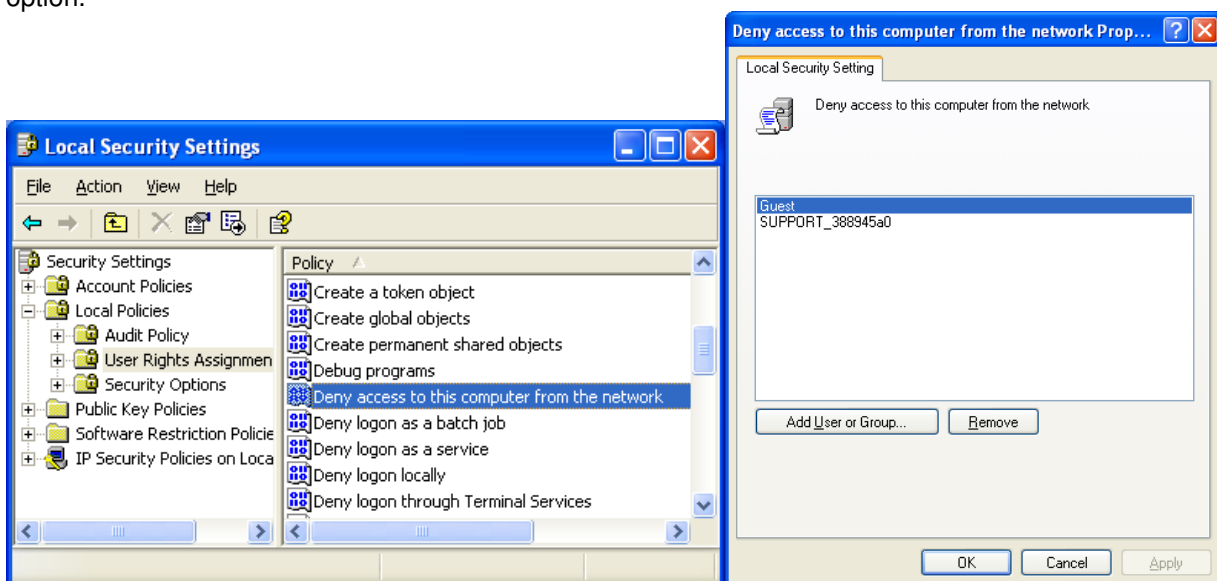

10) Move to 'Access this computer from the network', and then select 'Properties' by right clicking the mouse or double clicking it.

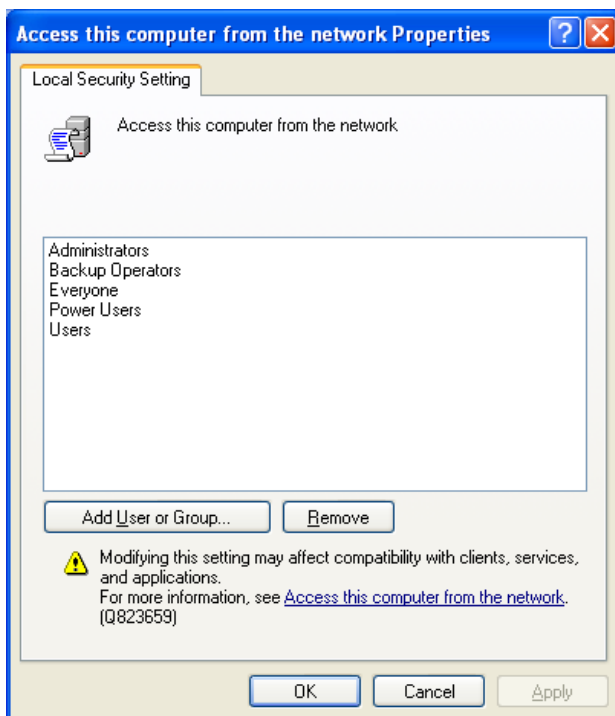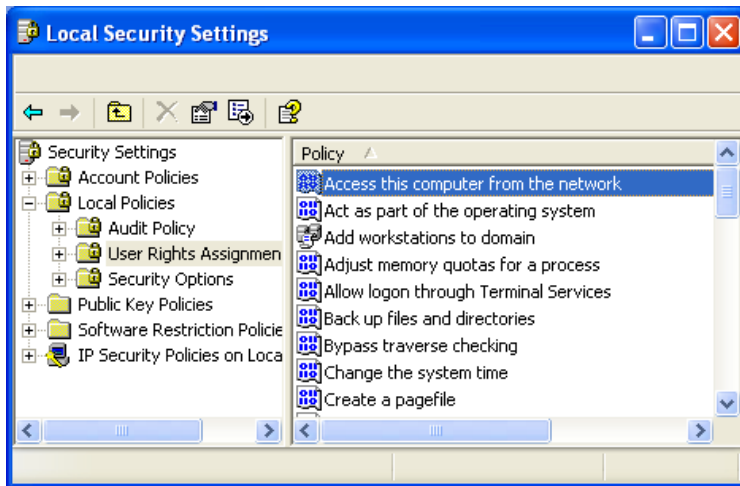


11) Click on 'Add User or Group'

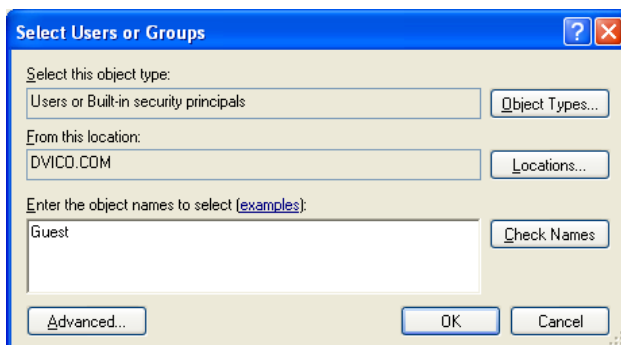

12) Type in "Guest" and then click on "OK" button.


13) Press OK, and Guest will be registered.

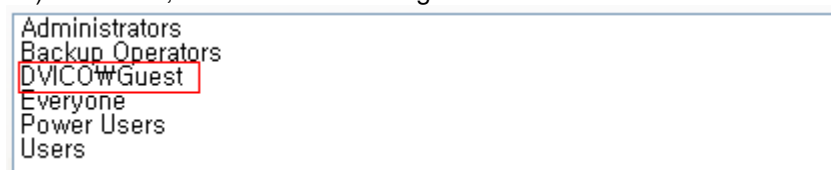


< When connecting Computer to TViX directly >

In this case, you have to use Cross LAN cable type generally.

If the computer's LAN card was connected to Internet line, you can mount additional LAN card to your PC and connect that additional LAN card to TViX.

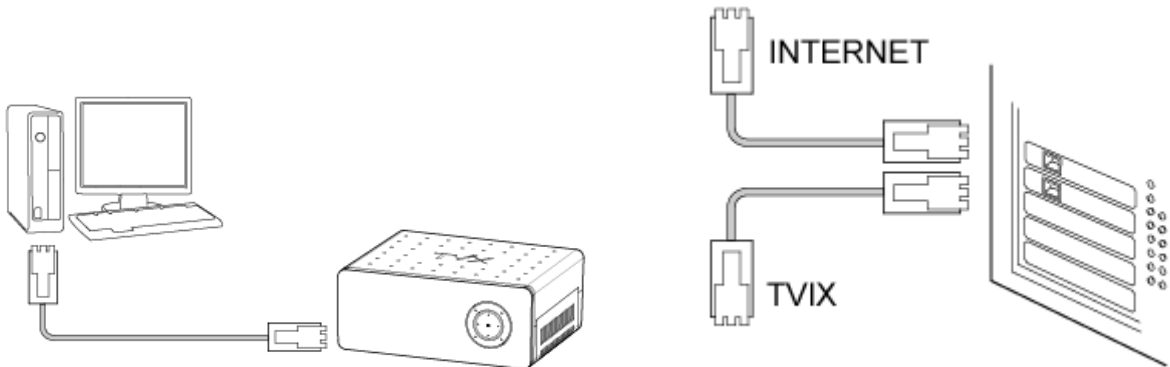

1 Move to 'Control Panel' > 'Network connections', and select 'Properties' by right click on the mouse.

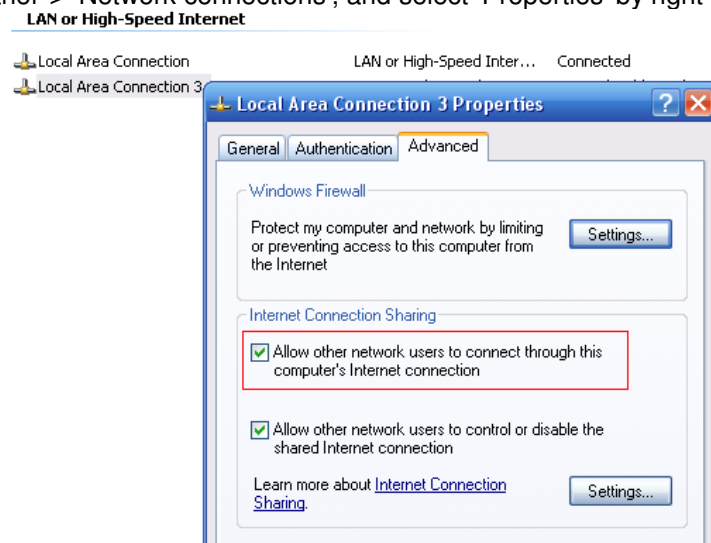


2 When Windows 2000 or XP, Check "Allow other network users to connect through this computer's internet connection"

3 Double click 'TCP/IP->LAN card' that you want to use on your computer. You must select the additional LAN card.


Check 'Specify an IP address', and write 'IP address' & 'Subnet mask' that you want to use.

Ex) IP address : 192.168.0.1 Subnet mask : 255.255.255.0

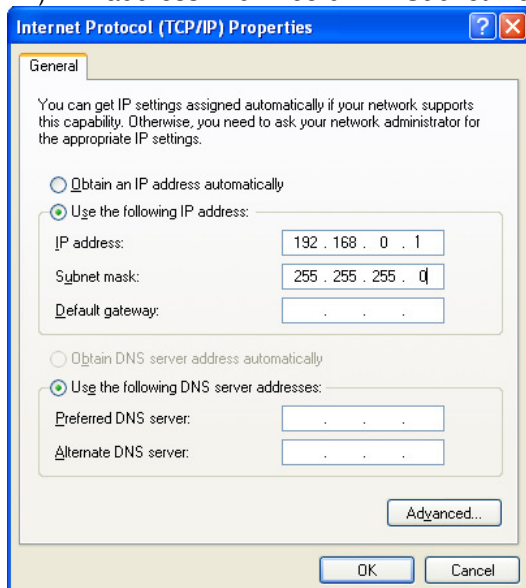


< When connecting with IP Router or Hub >

If you have already been assigned dynamic IP address from a DHCP Server or IP Router in your local area network, then no need to write a static IP address. Then obtain the automatically assigned IP address or write an IP address & Subnet mask that the DHCP Server or the IP Router provides. Select 'Control Panel' > 'Network Connections', and select 'Status' properties by right clicking the mouse. After clicking the Support tab, you should see an IP Address. (ex: 192.168.1.127)

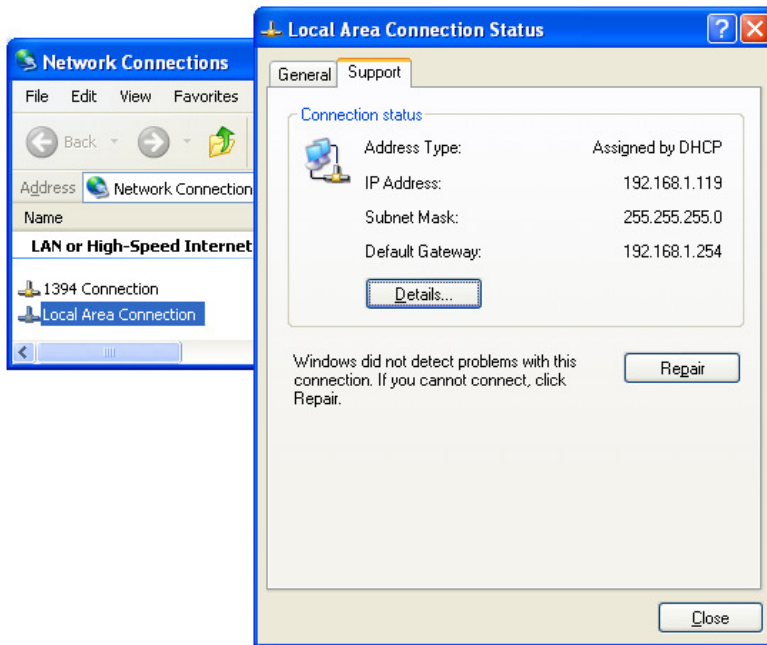

< Disable Windows Firewall >



- 1 Move to 'Control Panel' > 'Network Connections', and select 'Properties' by right clicking on the mouse. Click on the 'Advanced' tab. Disable 'Internet Connection Firewall'.
- 2 If you use service pack 2, click on 'Settings' at 'Windows Firewall'.
- 3 Check 'Off' and then click 'OK'

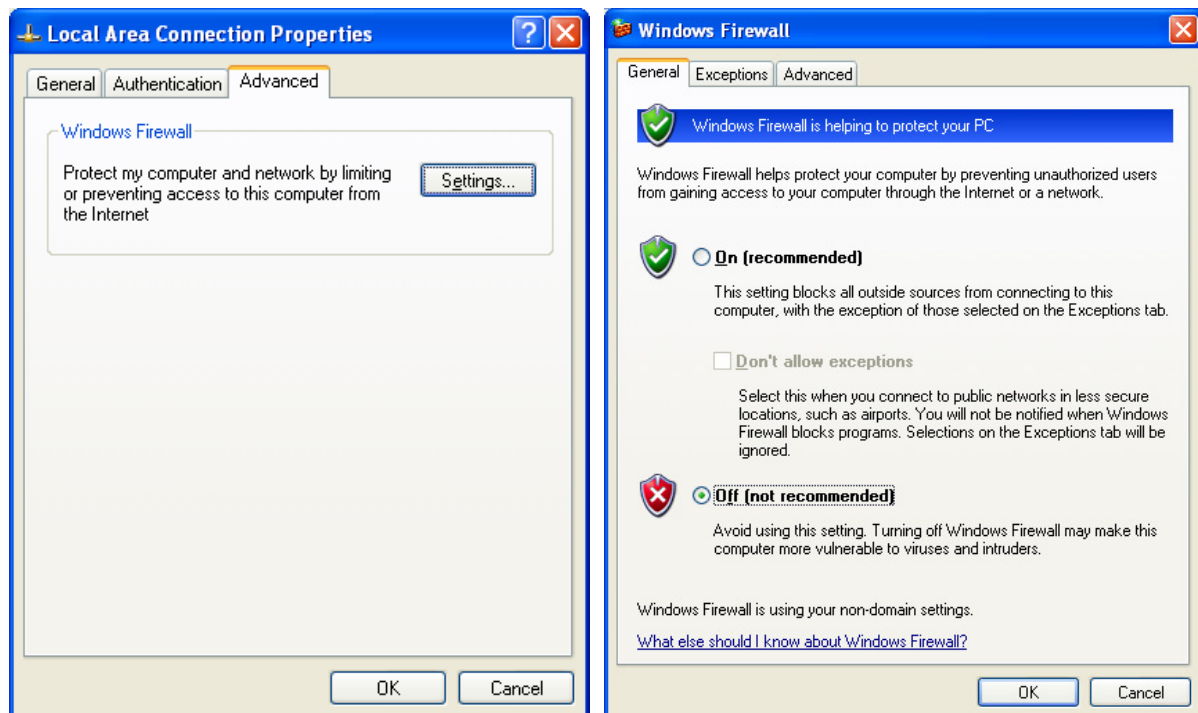



7.3.6 Setting Static IP Network Configurations in TViX

1 Press [SETUP] button on the remote. setup screen will be displayed. On that Set UP screen, select Network setting→Network disk and type the IP address in the Server IP. (ex: 172.28.1.70)
The default is DHCP and if you want to set Static IP, you can select and change Static IP on the IP setting.
If you have used the DHCP you don't need to assign the IP address because it will be assigned automatically.


2 If you cannot access via LAN with DHCP setting, we recommend to use the Static IP setting.

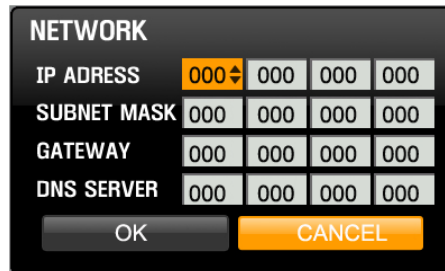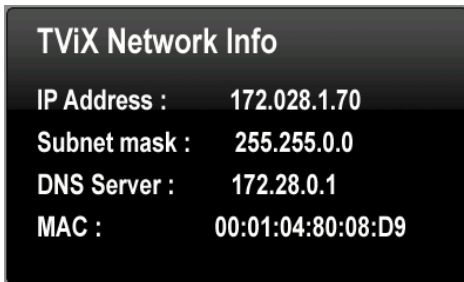

3 Select 'Control Panel > 'Network Connections', and select 'Status' properties by right clicking the mouse. After clicking the Support tab, press details, and you can see the Network connection details. Write IP address, Subnet Mask, default gateway and DNS server.
You must write different IP address like below image. (ex: 172.28.1.70 → 172.28.1.168)
Forth address is different compared with PC's IP address.

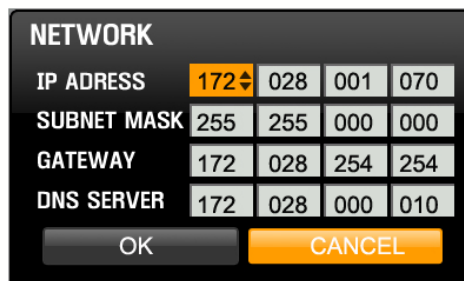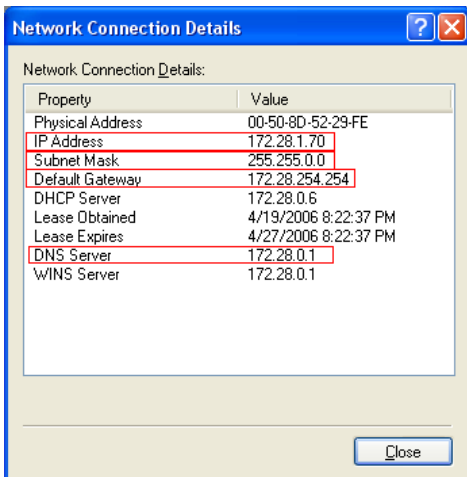

4 When the setting is successfully finished, you will be able to see the 4 PC Tray Icons. Network Disk is supported up to 4 PC Tray system. You can see the partition on the network icon like below image.

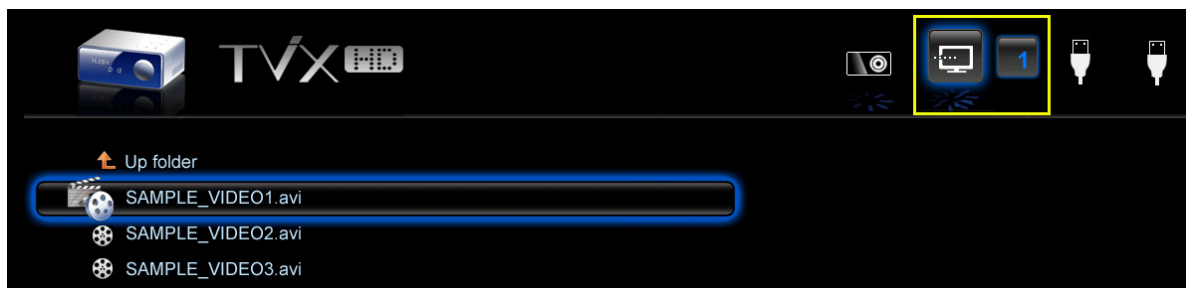

5 You may check for detailed usage at the TViX website (www.tvix.co.kr/Eng).

7.3.7 Wireless Network

[Connect USB wireless module]

- 1 Connect the USB module into enclosed cradle after connecting the AP Router to a PC.
- 2 You should not connect the USB module to TViX without the cradle. If you connect it by force, the TViX can be damaged. if you have TViX PVR 2200 series, you must use enclosed USB host cable.
- 3 Please refer to the TViX homepage(www.TViX.co.kr) for a list of compatible wireless devices.

[Configure Wireless Network]

- 1 After booting, press SETUP-NETWORK- "Wi-Fi IP setting" and select DHCP or static IP.
- 2 After selecting DHCP, press "Search Wi-Fi Network" for searching your AP or AP router.
- 3 After the interval of searching, you can see following popup menu. Select the AP you want to get connect with

A red colored icon means the AP uses **WEP** (Wired Equivalent Privacy) and a blue colored icon means a non-WEP AP.
Currently supported WEP (Wired Equivalent Privacy) settings are the OPEN System and WPA(Wi-Fi Protected Access).

WEP key input : WEP 64-Bit/ WEP 128 key and ASCII and HEXA key.

Old firmware is not supporting the HEXA key.

WPA key input : ASCII only.

RADIUS (Remote Authentication Dial-In User Services) servers are not supported.

✳ You have to configure the WEP setting of the AP using the AP's instruction in advance.

- 4 Insert the network key using the remote's numeric keys. As you press the MENU button, the input mode for the remote will be cycle from lowercase alphabet to uppercase alphabet to numeric input mode.

☞ To delete a character, press the Capture/Delete button.

- 5 If you insert exact network key, you could see well-formed TViX Wi-Fi Network Info like following. network key is Hexa or ASCII.

- 6 If the network key is wrong or the AP doesn't work with DHCP setting, you would see some missing fields in TViX Wi-Fi Network Info POP UP. Those fields which you might always see are SSID and MAC




- 6 If you still have the problem after filling up correct key, please recheck your setting of AP or reconnect the USB port.

- 7 Network disk setting : This setting is same as the wired network setting. To configure the network disk, refer to TViX FAQ or NetShare manual

✳Caution✳

- 1 If you connect to a secured AP, the network performance will be 10% lower than an unsecured AP.
- 2 In wireless connectivity connecting the Wireless USB to TViX Device. The TViX needs to be powered off initially and then Powered ON .Then on the Network setting Menu WIFI IP setting will be enabled
- 3 For better Wi-Fi signals adjust the position of AP and USB module
- 4 If you play high definition files over Wi-Fi, you will see stuttering. Also, depending on the environment, you may experience stuttering when you play DVD files.
- 5 If you use a USB Wi-Fi adapter with another USB device, it may not work properly.

* If you want to change AP, you have to search the wireless network as in Step 2.

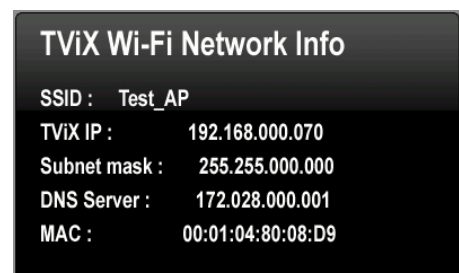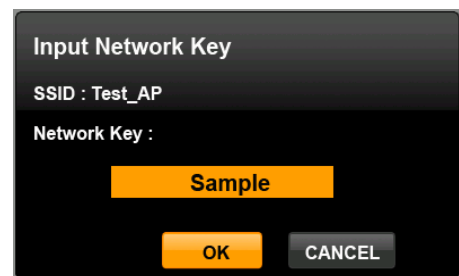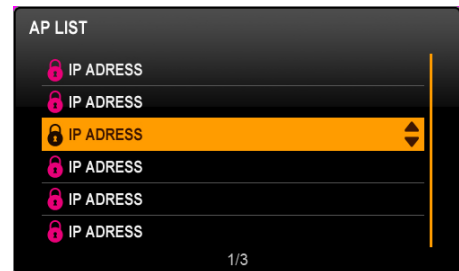

8 Firmware Upgrade


Firmware Version Check.

- 1 Connect the TViX to your TV and then turn on the TViX.
- 2 Press the SETUP button on the top panel and the setup screen will be displayed.
- 3 Check the latest firmware version of TViX at www.tvix.co.kr

*** You'll be notified of any firmware updates or news if you fill out the customer registration form at <http://www.tvix.co.kr>


Downloading the Firmware.

- 1 Download the latest firmware from <http://www.tvix.co.kr> to your PC.
- 2 Connect the TViX to your PC with a USB and then turn it on.
- 3 Your system will recognize the TViX as an external hard drive.
- 4 Copy the latest firmware files into the root of the TViX hard drive or USB memory device.
- 5 Turn off the TViX and bring it to your TV for firmware upgrading.

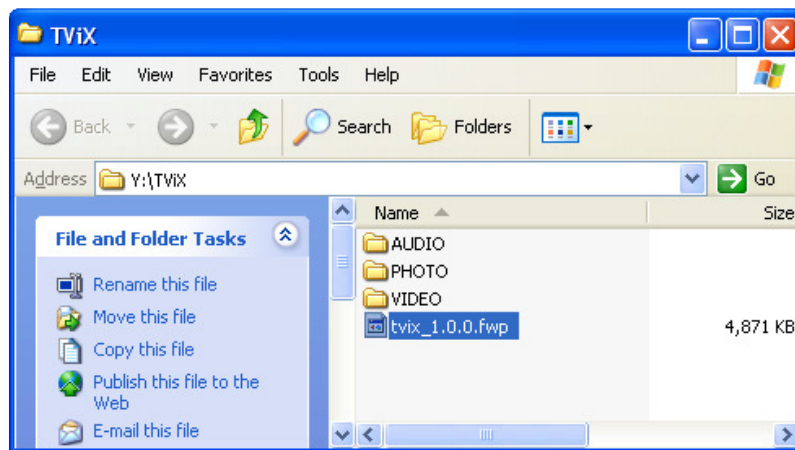


How to Upgrade the Firmware

- 1 Connect the TViX to your TV
- 2 Select the copied firmware file (ex: TViX1.0.0.fwp) and press OK on the remote to start upgrading.
- 3 The following screen will be displayed. Follow the instructions on the screen.

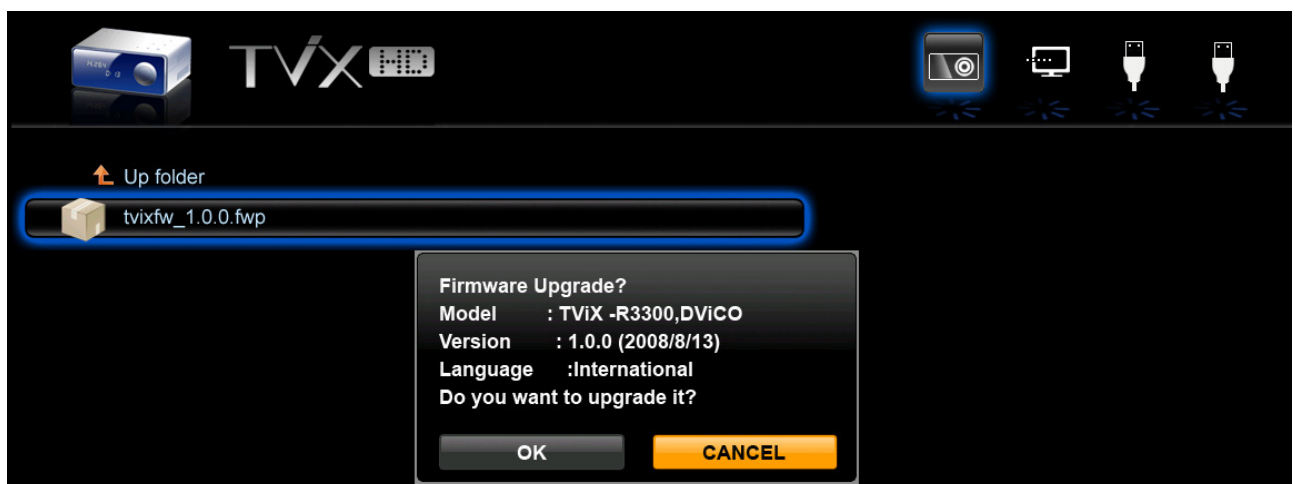

- 4 New firmware upgrade is in process (takes about 3 minute). When the upgrade is successfully finished, the TViX HD will reboot automatically.

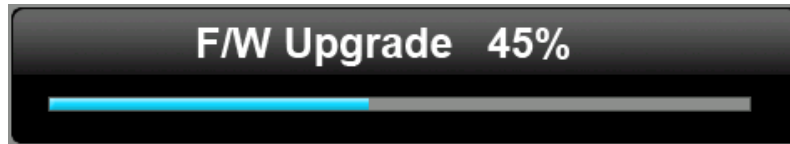


< CAUTIONS: Safe Mode Upgrading >

Even if the TViX accidentally turns off during the firmware upgrade, the safe mode will enable the TViX to be re-upgraded.

Please follow the steps below:

- 1 Connect the TViX to your PC with a USB and then turn it on.
- 2 Copy the latest firmware files into the root of the TViX hard drive or USB memory device
- 3 The Safe upgrade will check the firmware file of internal HDD in advance and then external USB host.
- 4 Press and hold the MENU button on the top panel and turn on the TViX by using power button.

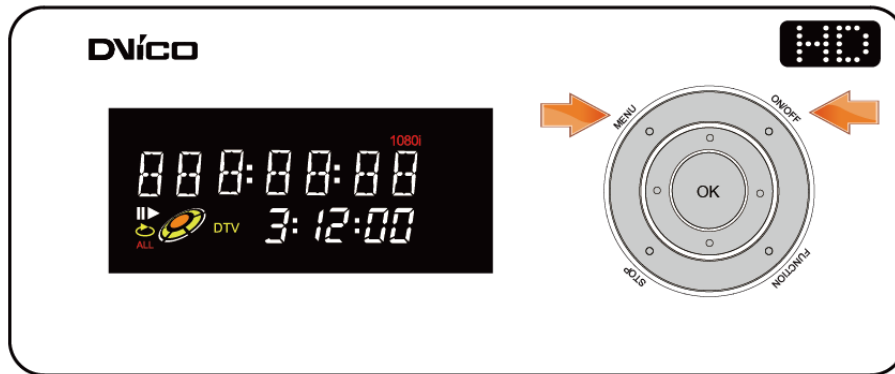

- 5 The VFD will show the seeking FW, such as SEEK FW.
- 6 Press OK on the control panel to start upgrading.
- 7 The VFD will show UPG when the new firmware upgrade is in process.
- 8 The TViX will automatically reboot after the upgrade has been successfully finished.

< CAUTIONS: Safe Mode Upgrading >

Even if the TViX accidentally turns off during the firmware upgrade, the safe mode will enable the TViX to be re-upgraded.

Please follow the steps below:

- 1 Connect the TViX to your PC with a USB and then turn it on.
- 2 Copy the latest firmware files into the root of the TViX hard drive or USB memory device
- 3 The Safe upgrade will check the firmware file of internal HDD in advance and then external USB host.
- 4 Press and hold the MENU (M) button on the top panel and turn on the TViX by using power button ON/OFF (⏻).




- 5 Keep the MENU button pressed until the BLUE LED blink on quickly. (250ms)
- 6 Press OK on the control panel to start upgrading. (500ms)
- 7 The LED will blink periodically when the new firmware upgrade is in process.
- 8 The TViX will automatically reboot after the upgrade has been successfully finished.

9 Using USB Connection with a PC

TViX uses a SATA HDD as its contents storage device and works just like an external USB 2.0 hard drive when you connect it to your PC.

After connecting to your PC, turn on the power of the TViX.

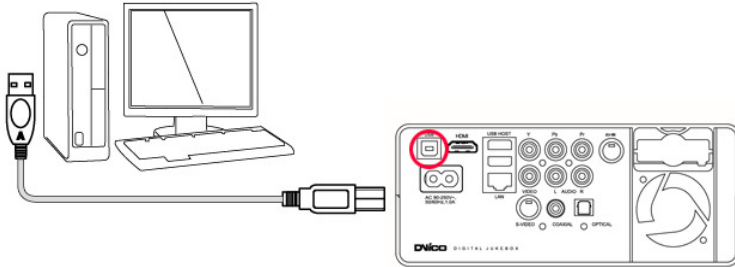


If you are a using Windows98SE user, you should download a USB storage driver from our web site www.tvix.co.kr before you connect your TViX HD with your system. You do not need to install the driver under Windows ME/2000/XP

9.1 Making a Partition and Formatting the HDDs


1 Under Windows 2000/XP/VISTA, you can make a partition and format the HDD using the Disk Manager utility.

2 Right click "My Computer" → Choose "manage" from the pop up menu and the "Computer Management" window will appear → choose "Disk Management" folder.


3 The disk list will appear on the right side of the "Computer Management" windows. Right click the TViX HDD from the list, and from the pop up menu choose "make partition" to create partitions on the chosen disk.

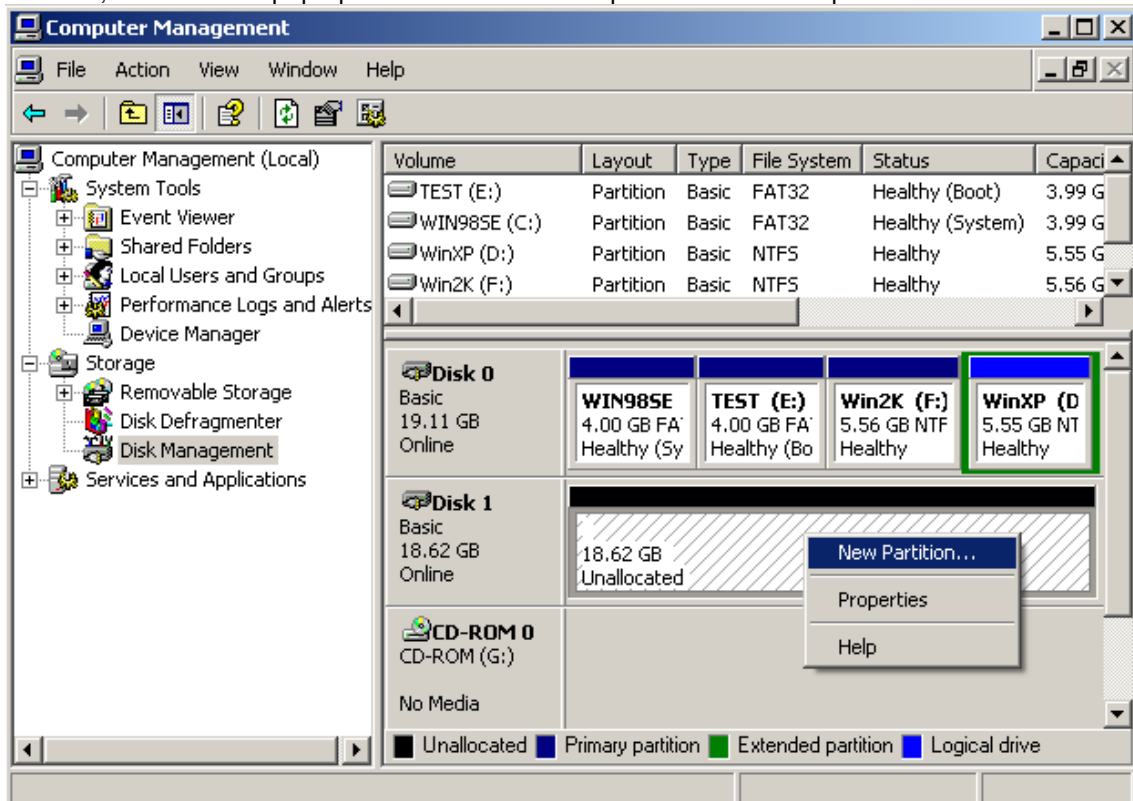


4 When the New Partition Wizard appears, press "Next>".

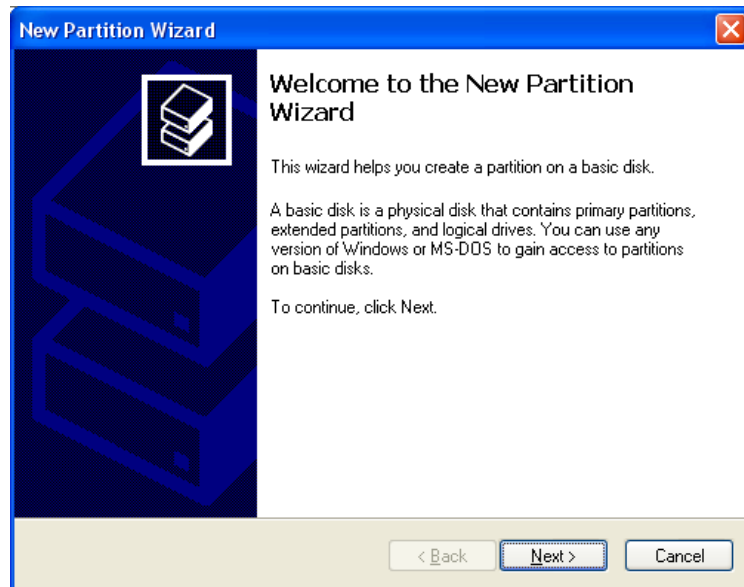


5 Choose the partition type and format the HDD. If you want several partitions, select Extended Partition.

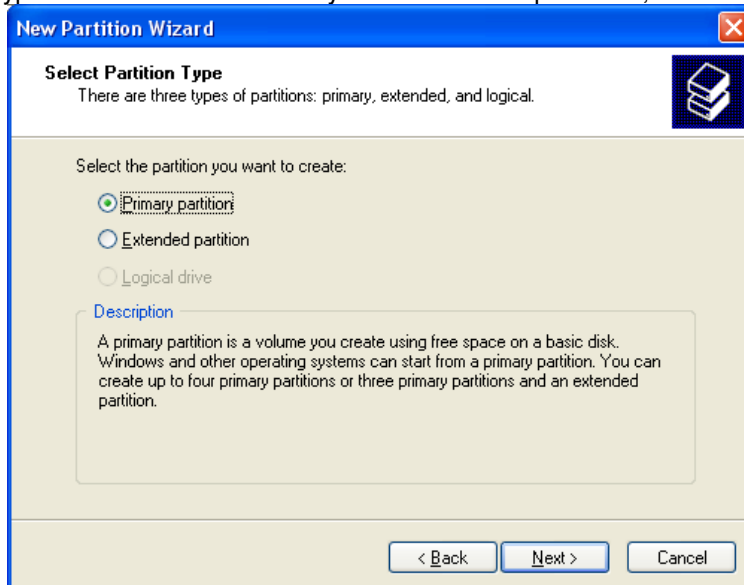


6 Select the partition size. If you want one partition, press "Next>". For FAT32, size is limited to 32000MB or under.

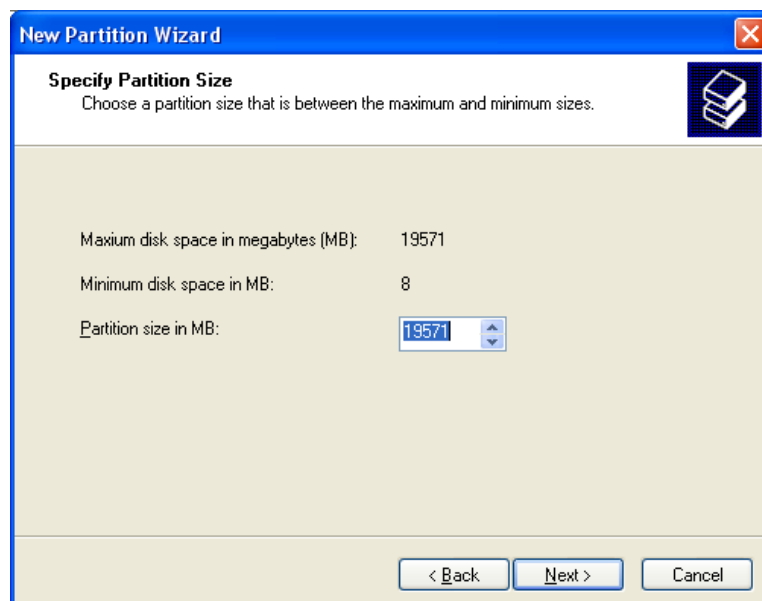


- 7 Select the Drive Letter. Then press the “Next>” button.

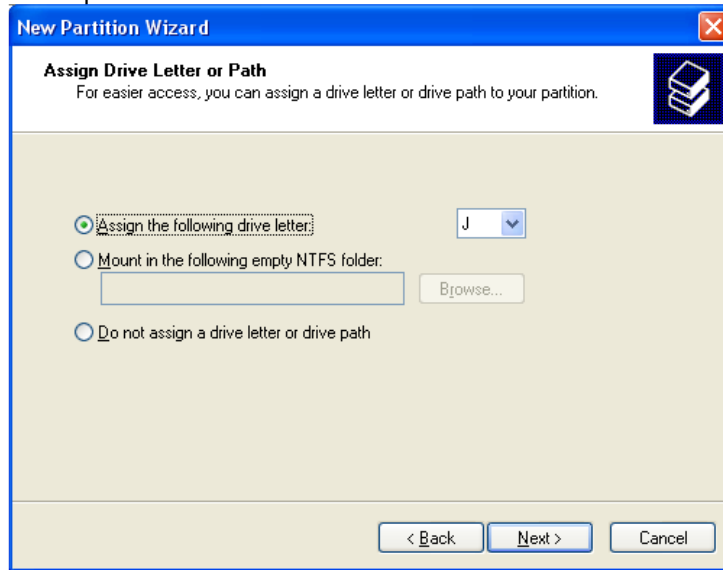


- 8 Select the partition Format. If you choose FAT32 file format on Windows 2000/XP, the drives maximum size will be limited to 32GBs. If you want to use a single drive letter of 32GBs or more, you have to format on Windows 98SE/ME. We don't recommend the FAT32 partition to record the DTV channel.

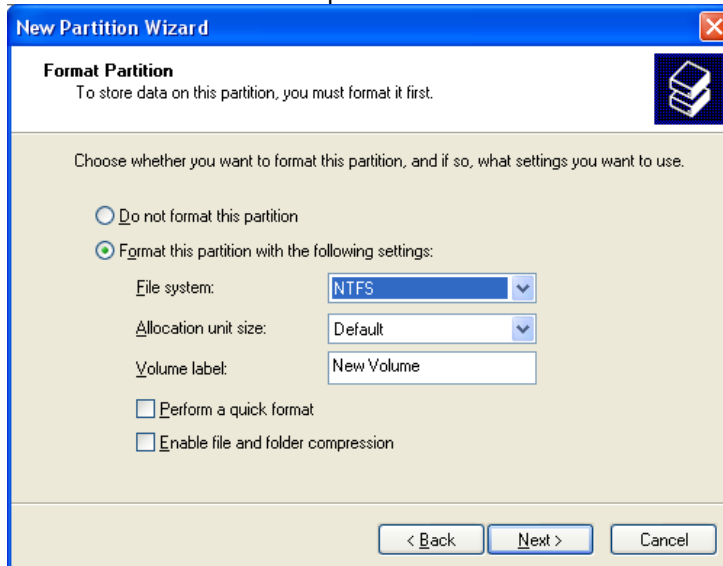


- 9 When completed, detailed information will appear as shown below. Click the “OK” button to finish.

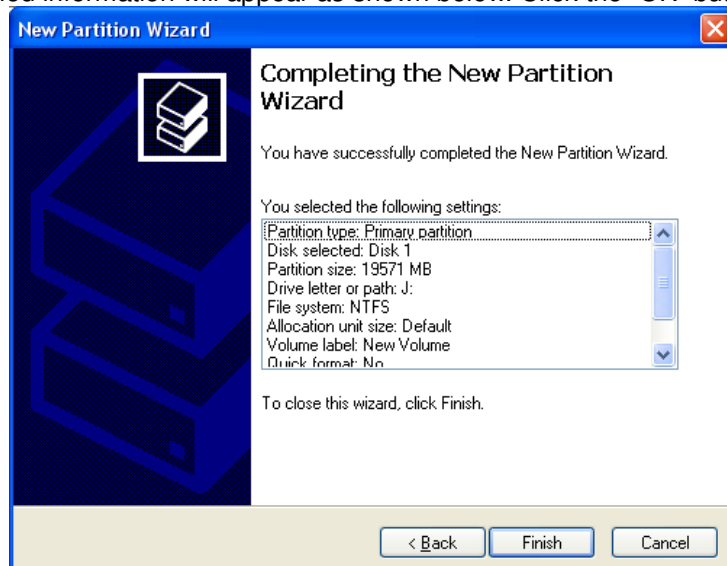

9.2 Unplug or Eject Hardware


- 1 On the windows tray,  double click the hot swap icon. The “Unplug or Eject Hardware” window will appear. Press the Stop button if you want to unplug the device.

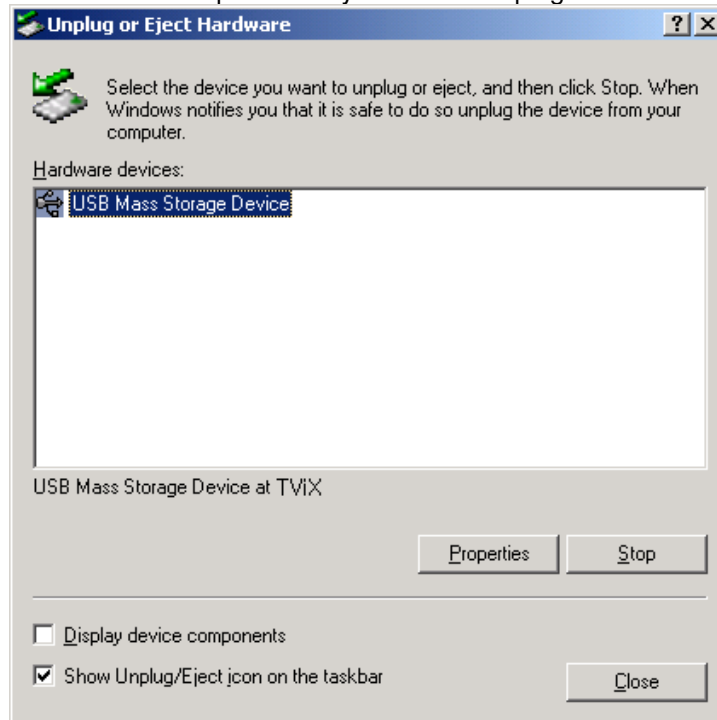

- 2 Press OK on “Stop a Hardware device” window.



- 3 Press OK and unplug the device.

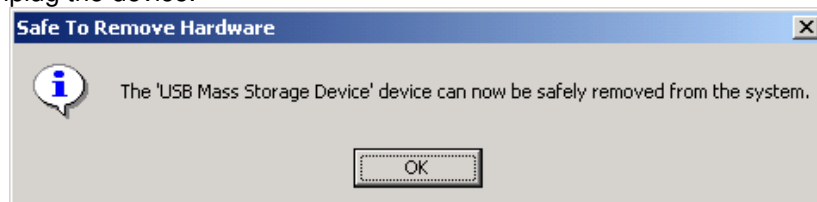

Close TViX folder or disk on My computer before unplugging the Hard disk.



If TViX folder is open, unplugging it may not work properly.

10 Troubleshooting

**** For detailed instructions, please refer to the the latest pdf file on the TViX Homepage (www.tvix.co.kr) or TViX FAQ.**

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair.

No Screen Display. Video Output not working.	<ol style="list-style-type: none"> 1. Press the TVOUT button on TViX remote to toggle between TV OUT settings. 2. Check the TV-OUT settings and cable-type on the TViX and ensure that it is consistent with the VIDEO-IN settings of the TV. 3. Ensure that the Video Cable is securely connected to the TViX and to the TV.
The TViX does not respond to the Remote Control. Menu Items cannot be selected.	<ol style="list-style-type: none"> 1. Reduce the distance between the Remote and the TViX and try again. 2. Replace remote batteries. 3. Perform a Hardware factory Reset Procedure. 4. Check for interference from other IR sources by trying to operate the TViX with all other components turned off.
TViX does not recognize the HDD.	<ol style="list-style-type: none"> 1. Check the USB connection to the Hard Disk Drive(HDD). 2. Check to ensure that the HDD has been correctly partitioned and formatted.
TViX does not show subtitle.	<p>Re-name the subtitle file the same as avi file name (except for file type extensions).</p> <p>TViX can show the subtitle when the file name is same.</p>
TViX does not display external video	Configure the external device's A/V output to NTSC(480i)/PAL(576i) and analog sound.
TViX does not display the Network-shared Folder on your PC.	<ol style="list-style-type: none"> 1. Check network connection between your PC and the TViX. 2. Reboot the TViX and re-establish the connection. 3. Depending on network environment, there may be a delay in searching for the network for up to about 10 minutes. 4. Ensure that WEP and ESSID settings are accurate.
Unable to Play Xvid, or MPEG, or AVI video files etc.	<ol style="list-style-type: none"> 1. Ensure that the selected video file contains supported video codec. 2. Run the check Disk on the SETUP. 3. If playing a file from a network drive, there may be too much traffic on the network (check for virus). Try to reboot your PC and establish connection again.
Time-shifting is not working in digital channel.	The first partition of the internal hard disk must use the NTFS format. FAT32 format can cause an error message.

11 Appendix - Technical Terms

HDMI

The High-Definition Multimedia Interface (HDMI) is an all-digital audio/video interface capable of transmitting uncompressed streams. HDMI is compatible with High-bandwidth Digital Content Protection (HDCP) Digital Rights Management technology.

HDMI provides an interface between any compatible digital audio/video source, such as a set-top box, a DVD player, a PC, a video game console, or an AV receiver and a compatible digital audio and/or video monitor, such as a digital television (DTV). In 2006, HDMI began to appear as a feature on prosumer, HDTV camcorders and even high-end digital still cameras.

DivX

DivX is the name of a revolutionary new video codec which is based on the new MPEG-4 compression standard for video. When you install a video codec on your system it basically works as an add-on to your system with instructions on how to compress/decompress video in that video format. Once you've installed the DivX codec on your system you will be able to play DivX movies using Windows Media Player or any other DivX-enabled player.

Despite the fact that DivX movies offer better compression and higher quality video than regular MPEG movies it takes more time to encode due to the incredible compression technology. The DivX codec makes it possible to compress/encode a full-length movie at near DVD-quality, which is small enough to fit on a single CD (700MB). The DivX video is usually combined with MP3 audio to produce both high quality video and audio.

Xvid

XviD is the name of a new open-source video codec, which like the DivX is based on the new MPEG-4 compression standard for video. It's currently being developed by people from all over the world. When you install a video codec on your system, it basically works as an 'add-on' to your system with instructions on how to compress/decompress video in that video format. Once you've installed the XviD codec on your system you will be able to play XviD movies using Windows Media Player or any other XviD-enabled player.

MPEG

MPEG stands for Motion Picture Experts Group. This is the same group that made the MPEG-1 (used in VideoCDs), MPEG-2 (used in DVD and SuperVCDs and other high bandwidth systems) and MPEG-4 (ASF, DivX, WMV, low-mid bandwidth systems) standards. They are also responsible for MP3 (MPEG Audio Layer 3) and AAC audio compression standards.

VOB

VOB stands for Video Objects. DVD movies are stored in VOB files. Each VOB file has a number of video/audio/subpicture streams.

AVI

AVI stands for Audio Video Interleave. AVI is a file format, like MP3 or JPG. But unlike these formats, AVI is a container format, meaning it can contain video/audio compressed files using many different combinations of codecs. Therefore, while MP3 and JPG can only contain a certain kind of compression (MPEG Audio Layer 3 and JPEG), AVI can contain many different kinds of compression (eg. DivX video + WMA audio or Indeo video + PCM audio) as long as a codec is available for encoding/decoding. All AVI files look the same on the "outside", but on the "inside", they may be completely different. Almost all tools on this site are not just DivX tools, but also AVI tools, so will work with many other codecs.

AC3

Initially known as Audio Coding 3, AC3 is a synonym for Dolby Digital these days. Dolby Digital is an advanced audio compression technology allowing to encode up to 6 separate channels at bit-rates up to 448kbit/s. For more information please check out the Dolby website.

DTS

By supplying film studios with outstanding techniques for delivering soundtracks to an attentive audience, DTS digital sound is now featured on virtually 100% of major Hollywood releases. Although the technology used for motion pictures differs from that featured in consumer and professional audio music and home theater systems, their DTS heritage means end users can enjoy sound that closely matches the original.

WMA

WMA stands for Windows Media Audio. It is a proprietary format developed by Microsoft for audio streaming and compression. WMA files, theoretically, has double the compression rate of MP3s, although this is debatable.

Ogg Vorbis

Ogg Vorbis is a new audio compression format. It is roughly comparable to other formats used to store and play digital music, such as MP3, VQF, AAC, and other digital audio formats. It is different from these other formats because it is completely free, open, and unpatented.

Ogg Vorbis has been designed to completely replace all proprietary, patented audio formats. That means that you can encode all your music or audio content in Vorbis and never look back.

480P

480 progressive; form of standard-definition digital television (SDTV) comparable to VGA computer displays but not considered high-definition television (HDTV), though 480p is discernibly cleaner and slightly sharper than analog television. The native resolution of DVD is 480p, but that resolution can be seen only if a DVD player outputs a progressive-scan signal and the DTV has progressive-scan or component-video inputs; it is also known as EDTV.

720P

720 progressive. One of two currently used formats designated as high-definition television in the ATSC DTV standard, this technology comprises 720 vertical pixels and 1,280 horizontal pixels. The p stands for progressive, as opposed to interlaced, scanning, which is used in the other accepted HDTV standard, known as 1080i. Contrary to myth, 720p is not inferior to 1080i; 720p has fewer lines but also has the advantages of progressive scanning and a constant vertical resolution of 720 lines, making it better able to handle motion.

1080i

1080 interlaced; one of two formats designated as high-definition television in the ATSC DTV standard, with 1,080 vertical pixels by 1,920 horizontal pixels. The i stands for interlaced, as opposed to progressive scanning, used in the second HDTV standard, 720p. Contrary to myth, 1080i is not superior to 720p; 1080i has more scanning lines but also suffers the disadvantages of interlaced scanning.

NTSC

The NTSC (National Television Standards Committee) was responsible for developing, in 1953, a set of standard protocol for television (TV) broadcast transmission and reception in the United States. Two other standards - Phase Alternation Line (PAL) and Sequential Couleur avec Memoire (SECAM) - are used in other parts of the world. The NTSC standards have not changed significantly since their inception, except for the addition of new parameters for color signals. NTSC signals are not directly compatible with computer systems. An NTSC TV image has 525 horizontal lines per frame (complete screen image). These lines are scanned from left to right and from top to bottom. Every other line is skipped. Thus it takes two screen scans to complete a frame: one scan for the odd-numbered horizontal lines, and another scan for the even-numbered lines. Each half-frame screen scan takes approximately 1/60 of a second; a complete frame is scanned every 1/30 second. This alternate-line scanning system is known as interlacing.

PAL

Phase Alternation Line (PAL) is the analog television display standard that is used in Europe and certain other parts of the world. PAL is one of the three major TV standards together with the American National Television Systems Committee(NTSC) color television system and the French Sequential Couleur avec Memoire (SECAM). NTSC is also used in Japan. SECAM is used in countries of the former Soviet Union. Like SECAM, PAL scans the cathode ray tube (CRT) horizontally 625 times to form the video image. NTSC scans 525 lines. Color definitions between the systems vary slightly.